

Strain Gage Accessories

Databook



Adhesives
Protective Coatings
Surface Cleaning
Installation Tools

Bondable Terminals
Wire and Cable
Application Kits
Solder and Flux

Strain Gage Accessories

Micro-Measurements

P.O. Box 27777

Raleigh, NC 27611

U.S.A.

PH: +1-919-365-3800

FAX: +1-919-365-3945

www.micro-measurements.com

Disclaimer

ALL PRODUCTS, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Vishay Precision Group, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "VPG"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained herein or in any other disclosure relating to any product.

The product specifications do not expand or otherwise modify VPG's terms and conditions of purchase, including but not limited to, the warranty expressed therein.

VPG makes no warranty, representation or guarantee other than as set forth in the terms and conditions of purchase. **To the maximum extent permitted by applicable law, VPG disclaims (i) any and all liability arising out of the application or use of any product, (ii) any and all liability, including without limitation special, consequential or incidental damages, and (iii) any and all implied warranties, including warranties of fitness for particular purpose, non-infringement and merchantability.**

Information provided in datasheets and/or specifications may vary from actual results in different applications and performance may vary over time. Statements regarding the suitability of products for certain types of applications are based on VPG's knowledge of typical requirements that are often placed on VPG products. It is the customer's responsibility to validate that a particular product with the properties described in the product specification is suitable for use in a particular application. You should ensure you have the current version of the relevant information by contacting VPG prior to performing installation or use of the product, such as on our website at vpgsensors.com.

No license, express, implied, or otherwise, to any intellectual property rights is granted by this document, or by any conduct of VPG.

The products shown herein are not designed for use in life-saving or life-sustaining applications unless otherwise expressly indicated. Customers using or selling VPG products not expressly indicated for use in such applications do so entirely at their own risk and agree to fully indemnify VPG for any damages arising or resulting from such use or sale. Please contact authorized VPG personnel to obtain written terms and conditions regarding products designed for such applications.

Product names and markings noted herein may be trademarks of their respective owners.

STRAIN GAGE ACCESSORIES

Table of Contents 3
Alphanumeric Index 7

GENERAL INFORMATION AND SELECTION GUIDE

General Information and Selection Guide 10

SURFACE CLEANING SUPPLIES

CSM-3 Degreaser 14
GC-6 Isopropyl Alcohol 14
MCA-1 Conditioner A 14
MCA-2 Conditioner A (bulk) 14
MN5A-1 Neutralizer 5A 14
MN5A-2 Neutralizer 5A (bulk) 14
SCP-1 220-Grit Wet-or-Dry Silicon-Carbide Paper 15
SCP-2 320-Grit Wet-or-Dry Silicon-Carbide Paper 15
SCP-3 400-Grit Wet-or-Dry Silicon-Carbide Paper 15
GC-5 Pumice Powder 15
TEC-1 Tetra-Etch® Compound 15
CSP-1 Cotton Tip Swabs 15
GSP-1 Gauze Sponges 15

STRAIN GAGE ADHESIVES AND CEMENTS

General Information and Selection Chart 18
M-Bond 200 Cyanoacrylate 20
M-Bond AE-10 Two-Component, 100%-Solids Epoxy 21
M-Bond GA-2 Two-Component, Partially-Filled, 100%-Solids Epoxy 22
RTC-2 Epoxy General-Purpose Epoxy 23
M-Bond A-12 Two-Component, 100%-Solids Epoxy 24
M-Bond AE-15 Two-Component, 100%-Solids Epoxy 25
M-Bond GA-61 Two-Component, Partially-Filled, 100%-Solids Epoxy 26
EpoxyLite 813 Two-Component, 100%-Solids Epoxy 27
EPY-500 Two-Component, Filled Epoxy, Bi-Pack 28
QA-500 Two-Component, Filled Epoxy, Bi-Pack 29
M-Bond 610 Two-Component, Solvent-Thinned, Epoxy-Phenolic 30
M-Bond 600 Two-Component, Solvent-Thinned, Epoxy-Phenolic 32
M-Bond 43-B Single-Component, Solvent-Thinned Epoxy 33
M-Bond 450 Two-Component, Solvent-Thinned Epoxy 34
Denex #3 Single-Component, Solvent-Thinned Epoxy 35
P Adhesive Two-Component, Solvent-Thinned, Polyimide 36
M-Bond 300 Two-Component, Polyester 37
NCC-3 Single-Component, Ceramic Cement 38
WC-16 Single-Component, Ceramic Cement 39
HG-1 Single-Component, Ceramic Cement 40
GC Single-Component, Ceramic Cement 41
PBX Two-Component, Ceramic Cement 42
Sauereisen DKS-8 Single-Component, Inorganic, Zircon-Based Cement 43

INSTALLATION TOOLS AND ACCESSORIES

SSH-1 Surgical Shears 46
STW-1 Tweezers, Ground, Sharp Ends 46
BTW-1 Tweezers, Flat, Blunt Ends 46
DPR-1 Dental Probe 46
SSC-1 Surgical Scapel and Blades 46
SSC-2 Replacement Scapel Blades 46
SSS-1 Steel Scale (Inches) 46
SSS-2 Steel Scale (Inches and Millimeters) 46
DP-1 4-H Drafting Pencil 46
DWC-1 Diagonal Cutters 46
NNP-1 Needle-Nosed Pliers 46
ATS-2 Gage Application Tool Set 46
GT-11 Camel's Hair Brush 47
SPT-1 Stainless Steel Mixing Spatula, Double Blade 47
SPT-2 Stainless Steel Mixing Spatula, Single Blade 47
MHG-1 Master Mite Heat Gun, 120 Vac 47
MHG-2 Master Mite Heat Gun, 240 Vac 47
PCT-2M Gage Installation Tape 47
PDT-3 Paper Drafting Tape 47

PLY-001	Kapton® Film	47
MJG-2	Mylar® Tape	48
TFT-2	Thermosetting Fiberglass Tape	48
FGC-1	Woven Fiberglass Cloth	48
TFE-2	High-Modulus TFE Teflon® with Silicone Mastic.....	48
HSC-1	Spring Clamp	48
HSC-2	Spring Clamp	48
HSC-3	Spring Clamp	48
GT-12	Neg'ator Constant Force Extension Spring Clamp	48
TFE-1	Teflon Film	48
GT-14	Pressure Pads and Backup Plates	48
SGP-1	Silicone Rubber	48
SGP-2	Silicone Rubber	48

BONDABLE TERMINALS

CEG-25C	Copper Foil, Epoxy-Glass Laminate Backing	50
CPF-25C	Copper Foil, Polyimide Film Backing	50
CEG-38C	Copper Foil, Epoxy-Glass Laminate Backing	50
CPF-38C	Copper Foil, Polyimide Film Backing	50
CEG-50C	Copper Foil, Epoxy-Glass Laminate Backing	50
CPF-50C	Copper Foil, Polyimide Film Backing	50
CEG-75C	Copper Foil, Epoxy-Glass Laminate Backing	50
CPF-75C	Copper Foil, Polyimide Film Backing	50
CEG-100C	Copper Foil, Epoxy-Glass Laminate Backing	50
CPF-100C	Copper Foil, Polyimide Film Backing	50
CEG-150C	Copper Foil, Epoxy-Glass Laminate Backing	50
CPF-150C	Copper Foil, Polyimide Film Backing	50
CEG-50D	Copper Foil, Epoxy-Glass Laminate Backing	51
CPF-50D	Copper Foil, Polyimide Film Backing	51
CEG-60D	Copper Foil, Epoxy-Glass Laminate Backing	51
CPF-60D	Copper Foil, Polyimide Film Backing	51
CEG-75D	Copper Foil, Epoxy-Glass Laminate Backing	51
CPF-75D	Copper Foil, Polyimide Film Backing	51
CEG-100D	Copper Foil, Epoxy-Glass Laminate Backing	51
CPF-100D	Copper Foil, Polyimide Film Backing	51
CPF-AST	Copper Foil, Polyimide Film Backing Assortment	51
CEG-21S	Copper Foil, Epoxy-Glass Laminate Backing	51
CEG-42S	Copper Foil, Epoxy-Glass Laminate Backing	51
CEG-63S	Copper Foil, Epoxy-Glass Laminate Backing	51
CEG-83S	Copper Foil, Epoxy-Glass Laminate Backing	51

SOLDERS AND ACCESSORIES

361A-20R	Tin-Lead-Antimony Solder	54
361-40R	Tin-Lead Solder	54
430-20S	Tin-Silver Solder	54
450-20R	Tin-Antimony Solder	54
450-20S	Tin-Antimony Solder	54
570-28R	Lead-Tin-Silver Solder	54
1240-FPA	Silver-Zinc-Copper-Nickel Solder	54
FAR-2	Rosin Flux Kit	55
AR-2	Flux (Bulk)	55
RSK-1	Rosin Solvent Kit	55
RSK-2	Rosin Solvent (Bulk)	55
RSK-4	Rosin Solvent Kit	55
FSS-1	Flux Kit	55
M5S-1	Mark V Soldering Station, Soldering Pencil, and Type A Chisel Tip	55
M5S-2	Mark V Control Unit Only	55
M5S-4	Mark V Soldering Pencil and Type A Chisel Tip	55
M5S-4A	Mark V Type A Chisel Solder Tip	55
M5S-4B	Mark V Type B Conical Solder Tip	55
M5S-4C	Mark V Type C Chisel Solder Tip	55
M5S-4D	Mark V Type D Conical Solder Tip	55
M5S-4E	Mark V Type E Special Solder Tip	55
WRS-1	Resistance Soldering Unit, 110 VAC	56
WRS-2	Resistance Soldering Unit, 220 VAC	56
WRS-3	Replacement Electrodes	56

WIRE, CABLE AND ACCESSORIES

General Information and Selection	58
134-AWP Single-Conductor, Solid Wire	59
136-AWP Single-Conductor, Solid Wire	59
127-AWN Single-Conductor, Solid Wire	59
130-AWN Single-Conductor, Solid Wire	59
134-AWN Single-Conductor, Solid Wire	59
136-AWN Single-Conductor, Solid Wire	59
127-AWQ Single-Conductor, Solid Wire	59
130-AWQ Single-Conductor, Solid Wire	59
134-AWQ Single-Conductor, Solid Wire	59
126-GWF Single-Conductor, Solid Wire	59
137-HWN Single-Conductor, Solid Wire	59
142-JWN Single-Conductor, Solid Wire	59
126-DWV Single-Conductor, Stranded Wire	59
126-FWK Single-Conductor, Stranded Wire	59
130-FWT Single-Conductor, Stranded Wire	59
322-DJV Three-Conductor Cable	60
326-DFV Three-Conductor Cable	60
330-DFV Three-Conductor Cable	60
326-BSV Three-Conductor Cable	60
326-DTV Three-Conductor Cable	60
326-DSV Three-Conductor Cable	60
330-FFE Three-Conductor Cable	60
330-FJT Three-Conductor Cable	60
336-FTE Three-Conductor Cable	60
326-FTE Three-Conductor Cable	60
330-FTE Three-Conductor Cable	60
326-GJF Three-Conductor Cable	60
426-DFV Four-Conductor Cable	61
430-DFV Four-Conductor Cable	61
422-DSV Four-Conductor Cable	61
424-DSV Four-Conductor Cable	61
426-BSV Four-Conductor Cable	61
426-DTV Four-Conductor Cable	61
430-FST Four-Conductor Cable	61
426-FTE Four-Conductor Cable	61
436-FTT Four-Conductor Cable	61
426-FFT Four-Conductor Cable	61
1-GL-64-001 Flat Ribbon Lead (Uninsulated)	61
1-KL-16-002 Flat Ribbon Lead (Uninsulated)	61
1-KL-08-003 Flat Ribbon Lead (Uninsulated)	61
1-KL-08-005 Flat Ribbon Lead (Uninsulated)	61
HST-1 Heat-Shrinkable Wire Splice Sealant	62
WTS-1 Thermal Wire Stripper, 110 VAC	62
WTS-2 Thermal Wire Stripper, 220 VAC	62
WTS-A Replacement Elements	62

PROTECTIVE COATINGS

General Information	64
M-Coat A Solvent-Thinned (Xylene) Polyurethane	66
M-Coat B Solvent-Thinned (MEK) Nitrile Rubber	67
M-Coat C Solvent-Thinned (Naphtha) RTV Silicone Rubber	68
M-Coat D Solvent-Thinned (Toluene) Acrylic	69
M-Coat F Kit of Materials for Environmental and Mechanical Protection	70
M-Coat FBT Solvent-Thinned Butyl Rubber	71
M-Coat JA Two-Part Polysulfide	72
M-Coat W-1 Microcrystalline Wax	73
3140 RTV Single-Component RTV Silicone Rubber	74
3145 RTV Single-Component RTV Silicone Rubber	75
M-Bond AE-10 Two-Component, 100%-Solids Epoxy used as Protective Coating	76
M-Bond AE-15 Two-Component, 100%-Solids Epoxy used as Protective Coating	76
M-Bond 43-B Single-Component, Solvent-Thinned Epoxy used as Protective Coating	77
M-Bond GA-61 Two-Component, Partially Filled, 100%-Solids Epoxy used as Protective Coating	78
Barrier E Single-Component, Neoprene Patch	79
Barrier WD Single-Component, Paste Wax	80

Gagekote #5	Single-Component, 100%-Solids Modified Polysulfide Epoxy	81
Gagekote #8	Single-Component, Transparent, Acrylic	82
Gagekote #11	Single-Component, Clear	83
STRAIN GAGE APPLICATION KITS		
GAK-2-200	Complete, with M-Bond 200	86
GAK-2-AE-10	Complete, with M-Bond AE-10	86
GAK-2-610	Complete, with M-Bond 610	86
BAK-200	Basic, with M-Bond 200	87
CEA-200	Complete, CEA Strain Gages with M-Bond 200	87
MAK-1	Master Kit, with M-Bond 200, AE-10, and M-Bond 610	88
PRECISION RESISTORS		
Specifications		90
W-599880-02	Shunt Calibration/120-Ohm Gage Circuit	91
W-119880-02	Shunt Calibration/120-Ohm Gage Circuit	91
S-59880-01	Shunt Calibration/120-Ohm Gage Circuit	91
S-29880-01	Shunt Calibration/120-Ohm Gage Circuit	91
S-19880-01	Shunt Calibration/120-Ohm Gage Circuit	91
S-14880-01	Shunt Calibration/120-Ohm Gage Circuit	91
S-11880-01	Shunt Calibration/120-Ohm Gage Circuit	91
S-5880-01	Shunt Calibration/120-Ohm Gage Circuit	91
W-349650-02	Shunt Calibration/350-Ohm Gage Circuit	91
W-174650-02	Shunt Calibration/350-Ohm Gage Circuit	91
S-87150-01	Shunt Calibration/350-Ohm Gage Circuit	91
S-57983-01	Shunt Calibration/350-Ohm Gage Circuit	91
S-43400-01	Shunt Calibration/350-Ohm Gage Circuit	91
S-34650-01	Shunt Calibration/350-Ohm Gage Circuit	91
S-17150-01	Shunt Calibration/350-Ohm Gage Circuit	91
W-999000-02	Shunt Calibration/1000-Ohm Gage Circuit	91
W-499000-02	Shunt Calibration/1000-Ohm Gage Circuit	91
W-249000-02	Shunt Calibration/1000-Ohm Gage Circuit	91
W-165666-02	Shunt Calibration/1000-Ohm Gage Circuit	91
W-124000-02	Shunt Calibration/1000-Ohm Gage Circuit	91
S-99000-01	Shunt Calibration/1000-Ohm Gage Circuit	91
S-49000-01	Shunt Calibration/1000-Ohm Gage Circuit	91
S-50-01	Bridge Completion	91
S-60-01	Bridge Completion	91
S-100-01	Bridge Completion	91
S-120-01	Bridge Completion	91
S-175-01	Bridge Completion	91
S-240-01	Bridge Completion	91
S-350-01	Bridge Completion	91
S-500-01	Bridge Completion	91
S-1000-01	Bridge Completion	91
S-2000-01	Bridge Completion	91
S-5000-01	Bridge Completion	91
H-100-01	Bridge Completion	91
H-120-01	Bridge Completion	91
H-350-01	Bridge Completion	91
H-1000-01	Bridge Completion	91
BRIDGE COMPLETION MODULES		
MR1-350-127		94
MR1-10C-129		94
MR1-350-130		94
MR2-350-128		94
MR1-120-133		94
SPECIAL-PURPOSE EQUIPMENT		
Model 1300	Gage Installation Tester	98
Model 700B	Portable Strain Gage Welding Unit	100
TECHNICAL SUPPORT		
Technical Information, Applications Support, and Training Programs		104

PRODUCT	PAGE NO.	PRODUCT	PAGE NO.
1-GL-64-001.....	61	CEG-100D	51
1-KL-08-003.....	61	CEG-150C	50
1-KL-08-005.....	61	CEG-21S	51
1-KL-16-002.....	61	CEG-25C	50
1240-FPA.....	54	CEG-38C	50
126-DWV	59	CEG-42S	51
126-FWK	59	CEG-50C	50
126-GWF	59	CEG-50D	51
127-AWN	59	CEG-60D	51
127-AWQ	59	CEG-63S	51
130-AWN	59	CEG-75C	50
130-AWQ	59	CEG-75D	51
130-FWT	59	CEG-83S	51
134-AWN	59	CPF-100C.....	50
134-AWP	59	CPF-100D.....	51
134-AWQ	59	CPF-150C.....	50
136-AWN	59	CPF-25C.....	50
136-AWP	59	CPF-38C.....	50
137-HWN.....	59	CPF-50C.....	50
142-JWN.....	59	CPF-50D	51
3140 RTV	74	CPF-60D	51
3145 RTV	75	CPF-75C.....	50
322-DJV.....	60	CPF-75D.....	51
326-BSV	60	CPF-AST	51
326-DFV	60	CSM-3.....	14
326-DSV	60	CSP-1.....	15
326-DTV	60	Denex #3	35
326-FTE.....	60	DP-1	46
326-GJF	60	DPR-1.....	46
330-DFV	60	DWC-1.....	46
330-FFE.....	60	EpoxyLite 813.....	27
330-FJT	60	EPY-500.....	28
330-FTE.....	60	FAR-2	55
336-FTE	60	FGC-1.....	48
361-40R.....	54	FSS-1	55
361A-20R	54	Gagekote #11	83
422-DSV	61	Gagekote #5	81
424-DSV	61	Gagekote #8	82
426-BSV	61	GAK-2-200	86
426-DFV	61	GAK-2-610	86
426-DTV	61	GAK-2-AE-10	86
426-FFT.....	61	GC	41
426-FTE.....	61	GC-5.....	15
430-20S.....	54	GC-6.....	14
430-DFV	61	GSP-1.....	15
430-FST.....	61	GT-11.....	47
436-FTT.....	61	GT-12.....	48
450-20R.....	54	GT-14.....	48
450-20S.....	54	H-1000-01	91
570-28R.....	54	H-100-01	91
AR-2	55	H-120-01	91
ATS-2.....	46	H-350-01	91
BAK-200	87	HG-1	40
Barrier E	79	HSC-1.....	48
Barrier WD	80	HSC-2.....	48
BTW-1	46	HSC-3.....	48
CEA-200	87	HST-1.....	62
CEG-100C.....	50	M5S-1	55

PRODUCT	PAGE NO.	PRODUCT	PAGE NO.
M5S-2.....	55	S-100-01	91
M5S-4.....	55	S-11880-01	91
M5S-4A	55	S-120-01	91
M5S-4B	55	S-14880-01	91
M5S-4C	55	S-17150-01	91
M5S-4D	55	S-175-01	91
M5S-4E	55	S-19880-01	91
MAK-1	88	S-2000-01	91
M-Bond 200	20	S-240-01	91
M-Bond 300	37	S-29880-01	91
M-Bond 43-B	33	S-34650-01	91
M-Bond 43-B	77	S-350-01	91
M-Bond 450	34	S-43400-01	91
M-Bond 600	32	S-49000-01	91
M-Bond 610	30	S-5000-01	91
M-Bond A-12.....	24	S-500-01	91
M-Bond AE-10	21	S-50-01	91
M-Bond AE-10	76	S-57983-01	91
M-Bond AE-15	25	S-5880-01	91
M-Bond AE-15	76	S-59880-01	91
M-Bond GA-2	22	S-60-01	91
M-Bond GA-61	26	S-87150-01	91
M-Bond GA-61	78	S-99000-01	91
MCA-1	14	Sauereisen DKS-8	43
MCA-2	14	SCP-1	15
M-Coat A	66	SCP-2	15
M-Coat B	67	SCP-3	15
M-Coat C.....	68	SGP-1	48
M-Coat D.....	69	SGP-2	48
M-Coat F	70	Specifications	90
M-Coat FBT.....	71	SPT-1	47
M-Coat JA	72	SPT-2	47
M-Coat W-1.....	73	SSC-1	46
MHG-1	47	SSC-2	46
MHG-2	47	SSH-1	46
MJG-2	48	SSS-1	46
MN5A-1	14	SSS-2	46
MN5A-2	14	STW-1	46
Model 1300	98	TEC-1	15
Model 700B	100	TFE-1	48
MR1-10C-129.....	94	TFE-2	48
MR1-120-133	94	TFT-2	48
MR1-350-127	94	W-119880-02	91
MR1-350-130	94	W-124000-02	91
MR2-350-128	94	W-165666-02	91
NCC-3	38	W-174650-02	91
NNP-1	46	W-249000-02	91
P Adhesive	36	W-349650-02	91
PBX.....	42	W-499000-02	91
PCT-2M	47	W-599880-02	91
PDT-3.....	47	W-999000-02	91
PLY-001	47	WC-16	39
QA-500	29	WRS-1	56
RSK-1	55	WRS-2	56
RSK-2	55	WRS-3	56
RSK-4	55	WTS-1	62
RTC-2 Epoxy	23	WTS-2	62
S-1000-01	91	WTS-A	62

General Information and
Selection Guide 10

General Information and Selection Guide

General Information and Selection Guide


This databook describes a wide range of accessories used for installation of electrical resistance strain gages. These accessories have been developed and selected specifically for their effectiveness and ease of use in making strain gage installations. They have also been carefully tested for their reliability and consistency of properties. The range of products offered in this catalog covers the full spectrum of typical gage installation requirements.

Making accurate and reliable strain gage measurements does not depend on the quality of the strain gage alone. The gage can perform to its fullest potential only if the installation is of comparable quality. To accomplish, this requires strict adherence to the recommended installation procedure, including use of the proper accessory tools and supplies.

As shown in the accompanying diagram, there are three principal components in every strain gage installation: 1) the strain gage, 2) the tools, materials, and supplies (accessories) used in installing the gage, and 3) the techniques employed in performing the installation. The well-documented formula for making consistently successful strain gage installations is simple—

- select high-quality, precision strain gages.
- select professional-caliber accessories, laboratory- and field-proven for effectiveness and compatibility with the strain gages.
- pay careful attention to the installation procedures recommended by the manufacturer of the gages and accessories.

There are, as indicated by the double-ended arrows in the diagram, three sets of interface reactions—between the gage and accessories, between the gage and application techniques, and between the accessories and installation procedures.

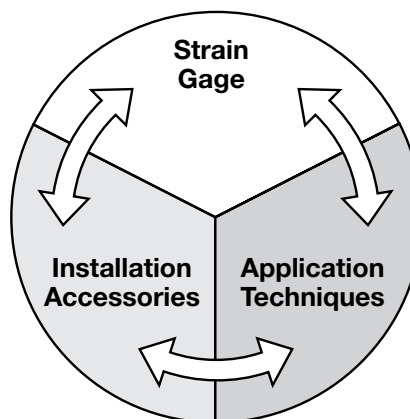

**COMPONENTS OF A
STRAIN GAGE INSTALLATION**

Because technique is such an important ingredient in strain gage installation, Micro-Measurements accessories are accompanied by detailed instructions, where needed, for their proper use. The importance of attention to detail, and of precise adherence to the application instructions supplied, cannot be overemphasized when installing strain gages.

Additionally, to help ensure your success in installing strain gages, we maintain an experienced and highly trained Applications Engineering staff. Our Applications Engineers are as close as your telephone. We urge you to call them for recommendations in the strain gage/ accessory selection process, installation technique, or to discuss any problems you may encounter when using our products.



General Information and Selection Guide

When a decision is made to conduct a strain gage test, proper selection of the appropriate accessories is most important to achieve high-quality installation of the strain gage. The chart below can be used as a guide to help in the selection process.

For your convenience in quickly locating a particular accessory, this databook is divided into sections by type of accessory (i.e., adhesives, soldering supplies, wire, etc.). In addition, the order of the sections in the catalog corresponds generally to the order of accessory use in making a strain gage installation. Thus, the first section is devoted to surface cleaning materials, the second to adhesives, and so on. Also included is information on other Micro-Measurements products that are very useful

for strain gage installation and testing. These include precision resistors, a gage installation tester, and a portable welder for installing weldable strain gages.

Each product entry includes both the product description and its stock designation. Product selection guides and recommendations are also provided where applicable.

Remember, your success in making reliable strain gage installations is important to us. Whenever you encounter any difficulty in the installation process, or are unsure of selecting the proper accessories for a given application, call, fax, or email our Applications Engineering Department for assistance.

PLANNING FOR RELIABLE STRAIN GAGE INSTALLATIONS	
SEQUENCE	RELEVANT QUESTIONS AND CONSIDERATIONS
DEFINE THE TEST CONDITIONS	Static or dynamic? Operating temperature range? Environment? Test duration? Measurement accuracy? Material properties of test part? Type of stress field and strain gradient?
SELECT THE STRAIN GAGE	Consult Tech Note TN-505, "Strain Gage Selection—Criteria, Procedures, Recommendations" and Data Book DB0103, "Precision Strain Gages".
SELECT THE SURFACE CLEANING SUPPLIES	Type of material and surface conditions of test part? Preparation time? Mechanical tools required? Limitations on material removal?
SELECT THE ADHESIVE	Compatibility with gage backing and test part material? Temperature (installing and test)? Fatigue life? Elongation capabilities? Strain levels expected? Clamping accessibility?
SELECT THE INSTALLATION TOOLS	Room-temperature or elevated-temperature installation? Gage location accessibility? Protective coating requirements?
SELECT THE TERMINALS	Leadwire system to be employed? Backing material? Size?
SELECT THE SOLDER AND LEADWIRE	Temperature (installing and test)? Mechanical strength? Gage factor desensitization? Bridge configuration? Corrosion? Electrostatic/Electromagnetic fields?
SELECT THE PROTECTIVE COATING	Environmental survival: Temperature range, mechanical abrasion, chemical attack, pressure, etc., and ability to cure in installation environment? Reinforcement?
PROCEED WITH THE INSTALLATION	



Surface Cleaning Supplies

CONTENTS

Solvent Cleaners

CSM-3	14
GC-6	14

Water-Based Cleaners

MCA-1	14
MCA-2 (bulk)	14
MN5A-1	14
MN5A-2 (bulk)	14

Surface Abrasion Materials

SCP-1	15
SCP-2	15
SCP-3	15
GC-5	15

Special-Purpose Materials

TEC-1	15
CSP-1	15
GSP-1	15

General Information and Selection

MATERIALS LIST

- Solvent cleaners
- Water-based cleaners
- Surface-abrasion materials
- Special-purpose materials

DESCRIPTION

For proper bonding of strain gages and temperature sensors, the workpiece surface must be chemically clean and totally free of contaminants before applying the adhesive. Recommended surface cleaning procedures for all common structural materials are described in Instruction Bulletin B-129, "Surface Preparation for Strain Gage Bonding".

In the case of steel and aluminum parts with finish-machined or formed surfaces, the surface cleaning procedure can be summarized briefly as follows:

1. Removal of oily contaminants with a solvent cleaner.
Note: Immersion of the workpiece in a degreaser is, by itself, inadequate; and, if done as a preliminary step, must be followed by cleaning with an uncontaminated solvent (one which is never returned to the container or otherwise reapplied after contact with the workpiece).
2. Light abrasion in the presence of a mildly acidic wash, to dislodge and remove oxides and mechanically bound contaminants.



3. Thorough surface scrubbing with an alkaline solution, to finish the cleaning process and leave the surface at the appropriate pH level for optimum bonding.

When the cleaning procedure is performed strictly according to the instructions in Instruction Bulletin B-129, and when the proper high-quality cleaning agents are used, the surface will be left in a condition best suited for bonding.

Following is a complete assortment of cleaning supplies, selected specifically for surface preparation in the installation of strain gages and bondable temperature sensors.

SOLVENT CLEANERS	
MODEL/PART NO.	TYPE/DESCRIPTION
CSM-3	Degreaser: A powerful environmentally friendly degreaser. Readily attacks general-purpose lubricating and hydraulic oils. 20-oz (0.56-kg) pressured spray can. Dispensing solvents from "one way" containers prevents contamination buildup. Two-year shelf life.
GC-6	Isopropyl Alcohol: Frequently used as a solvent degreaser where other solutions are restricted, such as with most plastics. Flammable. 4-oz (120-ml) bottle.

WATER-BASED CLEANERS	
Final surface preparation for most materials is accomplished with M-Prep Conditioner A immediately followed by M-Prep Neutralizer 5A.	
MODEL/PART NO.	TYPE/DESCRIPTION
CONDITIONER A: A mild phosphoric-acid compound. Acts as a mild etchant and accelerates the cleaning process. Shelf Life: 1 year at +75°F (+24°C).	
MCA-1	2-oz* (60-ml) plastic squeeze bottle with on/off dispenser nozzle cap.
MCA-2	Same as MCA-1 except 16 oz (0.5 l).
MCA-3	Same as MCA-1 except 32 oz (0.95 l).
NEUTRALIZER 5A: An ammonia-based material. Neutralizes any chemical reaction introduced by Conditioner A, and produces optimum surface conditions for most strain gage adhesives. Shelf Life: 1 year at +75°F (+24°C).	
MN5A-1	2-oz* (60-ml) plastic squeeze bottle with on/off dispenser nozzle bottle cap.
MN5A-2	Same as MN5A-1 except 16 oz (0.5 l).
MN5A-3	Same as MN5A-1 except 32 oz (0.95 l).

*Note: The 2-oz (60-ml) size is recommended for bench use and is easily refilled from the 16-oz (0.5-l) bottle.

General Information and Selection

SURFACE-ABRASION MATERIALS	
Abrading is often necessary to dislodge contaminants and to remove rust, scale, etc. When grit-blasting is necessary, use fine alumina powder and high-quality filters, and never recycle used grit. In general, wet-or-dry silicon-carbide paper is most suitable.	
MODEL/PART NO.	TYPE/DESCRIPTION
SCP-1	220-grit Wet-or-Dry Silicon-Carbide Paper: Suited to most steels. 1 in x 100 ft (25 mm x 30 m) roll.
SCP-2	320-grit Wet-or-Dry Silicon-Carbide Paper: Suited to most steels. Also suited to aluminum alloys and other soft metals. 1 in x 100 ft (25 mm x 30 m) roll.
SCP-3	400-grit Wet-or-Dry Silicon-Carbide Paper: Suited to aluminum alloys and other soft metals. 1 in x 100 ft (25 mm x 30 m) roll.
GC-5	Pumice Powder: Produces a dull, matte finish. Recommended for minimal removal of surface material. 1/2 oz (15 ml) bottle.

SPECIAL-PURPOSE MATERIALS	
MODEL/PART NO.	TYPE/DESCRIPTION
TEC-1	Tetra-Etch® Compound: Used for etching Teflon® to render the surface bondable. Shelf life 3 months at +32°F (0°C). 2 oz (60 ml) can.
CSP-1	Cotton Tip Applicators: 100 single-ended applicators per package [6 in (150 mm) long, wooden stick].
GSP-1	Gauze Sponges: 200 sponges [3 x 3 in (75 x 75 mm)] per package.

TetraEtch is a Registered Trademark of W. L. Gore.
Teflon is a Registered Trademark of DuPont.

Strain Gage Adhesives and Cements

CONTENTS

General Information and Selection Chart.....	18
---	----

Strain Gage Adhesives

M-Bond 200	20
M-Bond AE-10	21
M-Bond GA-2.....	22
RTC-2 Epoxy	23
M-Bond A-12.....	24
M-Bond AE-15	25
M-Bond GA-61.....	26
EpoxyLite 813.....	27
EPY-500.....	28
QA-500	29
M-Bond 610	30
M-Bond 600	32
M-Bond 43-B	33
M-Bond 450	34
Denex #3	35
P Adhesive	36
M-Bond 300	37

Free-Filament Strain Gage Cements

NCC-3	38
WC-16	39
HG-1	40
GC	41
PBX	42
Sauereisen DKS-8	43

General Information and Selection Guide

Because a strain gage can perform no better than the adhesive with which it is bonded to the test member, the adhesive is a vitally important component in every strain gage installation. Although there is no single adhesive ideally suited to all applications, Micro-Measurements offers a wide selection of adhesives to cover the spectrum of stress analysis testing, and for use in transducer manufacturing. Micro-Measurements adhesives are specially formulated and selected for highest performance under the recommended environmental conditions, and are packaged to provide for ease of mixing and application.

Each adhesive is accompanied by specific instructions for its proper handling—storage, mixing, application, curing, and, if appropriate, post-curing. The adhesive containers are also dated to assure freshness of the contents.

Note: It is usually misguided economy to attempt installing strain gages with outdated adhesive, or adhesive that has not been stored as recommended. It should also be noted that conventional industrial and consumer adhesives are not generally suitable for bonding strain gages.

Since different adhesives are intended for different types of applications and different environmental conditions, it is obviously important to select the most appropriate adhesive for each strain measurement task. The table below lists all of the Micro-Measurements adhesives, while the table on the following page is provided as a guide for selecting the most appropriate adhesive for compatibility with a particular strain gage series and test environment.

TYPES AND FEATURES	
M-BOND 200	Most widely used general-purpose adhesive. Easiest to handle. Fast room-temperature curing.
M-BOND AE-10	General-purpose adhesive highly resistant to moisture and most chemicals. Room-temperature curing.
M-BOND GA-2	Special-purpose adhesive primarily used on very rough and irregular surfaces. Room-temperature curing.
RTC-2 EPOXY	General-purpose, room-temperature curing adhesive for lab and field applications with high-elongation strain gages. Also excellent for strain measurement at cryogenic temperatures.
M-BOND A-12	Special-purpose, very high-elongation adhesive. Used only when other adhesives cannot meet elongation requirements. Elevated-temperature curing.
M-BOND AE-15	Similar to AE-10. Recommended for more critical applications, including transducer gaging. Moderately elevated-temperature curing.
M-BOND GA-61	Special-purpose adhesive with a higher operating temperature range than GA-2, and more viscous. Also used to fill irregular surfaces and to anchor leadwires. Elevated-temperature curing.
EPOXYLITE 813	Used for long term, high temperature applications requiring a filled glueline. Wider temperature range than GA-61.
EPY-500	Two-part, heat-curing, filled epoxy system with a wide temperature range.
QA-500	Two-component, clear liquid and powder adhesive for use with strain gages. Has excellent moisture and chemical resistance.
M-BOND 610	Used primarily in stress analysis applications over a wide temperature range, and in precision transducers. Elevated-temperature curing.
M-BOND 600	Similar to 610, but faster reacting. Can be cured at somewhat lower temperatures than 610.
M-BOND 43-B	Normally used in precision transducers. Highly resistant to moisture and chemical attack. Elevated-temperature curing.
M-BOND 450	Special-purpose, high-performance epoxy for higher-temperature transducer applications.
DENEX #3	One-part epoxy for lab and transducer work requiring minimal creep. Elevated temperature curing.
P	Single-part solvent thinned polyimide adhesive. Excellent for long-term high temperature applications.
M-BOND 300	Special-purpose polyester adhesive used primarily when low-temperature curing is required. Sensitive to solvents. Not recommended as a general-purpose adhesive.
NCC-3	Ceramic cement for bonding free-filament strain gages. Has superior bond strength to super-alloy materials, stainless steel, and titanium. Not for use on mild steel.
WC-16	Ceramic cement for bonding free-filament strain gages to materials with low thermal expansion coefficients. Not for use on iron-based alloys.
HG-1	Ceramic cement for bonding free-filament strain gages to most metals. Thermal expansion coefficient closely matches that of steel.
GC	Single-part ceramic cement used for free-filament gages. Recommended for use on low TCE materials, such as carbon.
PBX	Two-part ceramic cement/coating used for free-filament strain gages. Good adhesion to most metals.
SAUERISEN DKS-8	Single-part chemical setting zircon-based cement used for free-filament strain gages. High electrical insulation and thermal conductivity.

General Information and Selection Guide

Because a strain gage can perform no better than the adhesive with which it is bonded to the test member, the adhesive is a vitally important component in every strain gage installation. Although there is no single adhesive ideally suited to all applications, Micro-Measurements offers a wide selection of adhesives to cover the spectrum of stress analysis testing, and for use in transducer manufacturing. Micro-Measurements adhesives are specially formulated and selected for highest performance under the recommended environmental conditions, and are packaged to provide for ease of mixing and application.

Each adhesive is accompanied by specific instructions for its proper handling—storage, mixing, application, curing, and, if appropriate, post-curing. The adhesive containers are also dated to assure freshness of the contents.

Note: It is usually misguided economy to attempt installing strain gages with outdated adhesive, or adhesive that has not been stored as recommended. It should also be noted that conventional industrial and consumer adhesives are not generally suitable for bonding strain gages.

Since different adhesives are intended for different types of applications and different environmental conditions, it is obviously important to select the most appropriate adhesive for each strain measurement task. The table below lists all of the Micro-Measurements adhesives, while the table on the following page is provided as a guide for selecting the most appropriate adhesive for compatibility with a particular strain gage series and test environment.

RECOMMENDED ADHESIVES/STRAIN GAGE SERIES			
TYPE OF TEST OR APPLICATION	OPERATING TEMPERATURE RANGE	GAGE SERIES	M-BOND ADHESIVE
GENERAL STATIC OR STATIC-DYNAMIC STRESS ANALYSIS	-50° to +150°F (-45° to +65°C)	C2A, L2A, W2A, CEA, EA	200 or AE-10 or AE-15 or RTC-2 Epoxy
		WA, SA, WK, SK	AE-15 or 610
	-50° to +400°F (-45° to +205°C)	WA, SA, WK, SK	AE-10 or 600 or 610
	-452° to +450°F (-269° to +230°C)	WK, SK	610
<600°F (<315°C)	WK	610	
HIGH ELONGATION (POST-YIELD)	-50° to +150°F (-45° to +65°C)	CEA, EA	200 or AE-10 or RTC-2 Epoxy
		EP	AE-15 or A-12
DYNAMIC (CYCLIC) STRESS ANALYSIS	-100° to +150°F (-75° to +65°C)	ED	200 or AE-10
		WD	AE-10 or AE-15
	-320° to +500°F (-195° to +260°C)	WD	600 or 610
TRANSDUCER GAGING	-50° to +150°F (-45° to +65°C)	CEA, EA	AE-10 or AE-15
	-50° to +200°F (-45° to +95°C)	N2A, J2A	600 or 610 or 43-B
	-50° to +300°F (-45° to +150°C)	WA, SA, TA, TK, J5K	610 or 450 or P Adhesive or Denex #3
	-320° to +350°F (-195° to +175°C)	WK, SK, TK, J5K	610 or 450 or P Adhesive or Denex #3
HIGH TEMPERATURE GAGING	-452° to +700°F (-269° to +370°C)	WK, RK	P Adhesive
	-320° to +1600°F (-195° to +870°C)	ZC, ZWP, ZWN, ZWH	NCC-3 or WC-16 or HG-1 or GC or PBX or DKS-8

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND 200 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Applicators
- PCT-3M Gage Installation Tape



DESCRIPTION

For routine experimental stress analysis applications under temperate environmental conditions, M-Bond 200 adhesive is ordinarily the best choice. This adhesive is very easy to handle, and cures almost instantly to produce an essentially creep-free, fatigue-resistant bond, with elongation capability of five percent or more.

M-Bond 200 is a cyanoacrylate that has been pretested and certified for use in bonding strain gages. It is an excellent general-purpose adhesive for laboratory and short-term field applications. The procedure for making a strain gage installation with M-Bond 200 is illustrated and described in detail in Instruction Bulletin B-127 included in each kit of adhesive.

The user should note that the performance of the adhesive can be degraded by the effects of time, humidity conditions, elevated temperature, and moisture absorption. Because of the latter effect, strain gage installations should always be covered with a suitable protective coating. When necessitated by more rigorous test requirements and/or environmental conditions, consideration should be given to one of the M-Bond epoxy adhesives, using the “Recommended Adhesives/Strain Gage Series” chart.

CHARACTERISTICS			
PARAMETER	DETAILS		
CURE REQUIREMENTS*	One-minute thumb pressure, followed by a minimum two-minute delay before tape removal. Bond strength increases rapidly during first five minutes. Cure time must be extended under conditions of low temperature [$<70^{\circ}\text{F}$ ($<21^{\circ}\text{C}$)] or low humidity ($<40\%$ RH).		
OPERATING TEMPERATURE RANGE	<table border="0"> <tr> <td style="text-align: center;">Short Term: -300° to +200°F (-185° to +95°C).</td> <td style="text-align: center;">Long Term: -25° to +150°F (-32° to +65°C).</td> </tr> </table>	Short Term: -300° to +200°F (-185° to +95°C).	Long Term: -25° to +150°F (-32° to +65°C).
Short Term: -300° to +200°F (-185° to +95°C).	Long Term: -25° to +150°F (-32° to +65°C).		
ELONGATION CAPABILITIES	>5% at +75°F (+24°C), 3% at +75°F (+24°C) when used with CEA or EA/Option E strain gages.		
SHELF LIFE	<p>Minimum 12 months when stored unopened at +40°F (+5°C) or minimum 9 months when stored unopened at +75°F (+24°C).</p> <p><i>Note:</i> To ensure a proper seal, wipe bottle spout clean and dry before replacing cap.</p> <p><i>Note:</i> Condensation rapidly degrades adhesive performance and shelf life; if refrigerated, allow adhesive to reach room-temperature before opening. Refrigeration after opening is not recommended.</p>		
POT LIFE	Maximum 3 months at +75°F (+24°C) (not to exceed date of expiration) after opening. Replace the cap immediately after each use.		

PACKAGING OPTIONS	
KIT	BULK
1 bottle (1 oz/28 g) Adhesive 1 brush-cap bottle (30 ml) Catalyst	1 bottle (1 oz/28 g) Adhesive 5 tubes (2 g each) Adhesive 16 bottles (1 oz/28 g each) Adhesive 12 brush-cap bottles (30 ml each) Catalyst

*Reference: Instruction Bulletin B-127 for complete details.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND AE-10 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- PCT-3M Gage Installation Tape
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



DESCRIPTION

Two-component, 100%-solids epoxy system for generalpurpose stress analysis. Transparent, medium viscosity. Cure time as low as six hours at +75°F (+24°C) may be used. Elevated-temperature postcure is recommended for maximum stability, and/or tests above room temperature.

Highly resistant to moisture and most chemicals, particularly when postcured. For maximum elongation, bonding surface must be roughened. Cryogenic applications require very thin gluelines.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Long Term: -320° to +400°F (-195° to +204°C)
ELONGATION CAPABILITIES	1% at -320° (-195°C), 6% to 10% at +75°F (+24°C), 15% at +200°F (+95°C).
SHELF LIFE	Minimum 12 months at +75°F (+24°C); or 18 months at +40°F (+5°C). If crystals form in resin jar, heat to +120°F (+50°C) for 30 minutes. Cool before mixing. Refer to product label for most recent information.
POT LIFE	15 to 20 minutes at +75°F (+24°C). Can be extended by cooling jar or by spreading adhesive on clean aluminum plate.
CLAMPING PRESSURE	5 to 20 psi (35 to 140 kN/m ²).
CURE REQUIREMENTS*	<p>Preferred Room-Temperature Cure: 24 to 48 hours at +75°F (+24°C).</p> <p>Recommended Postcure: 2 hours at 25°F (15°C) above maximum operating temperature.</p>

PACKAGING	
KIT	BULK
6 mixing jars (10 g ea) Resin 1 bottle (15 ml) Curing Agent 10 6 calibrated pipettes 6 stirring rods	200 g Resin 40 g Curing Agent 10 3 calibrated pipettes

* **Reference:** Instruction Bulletin B-137, "Strain Gage Applications with M-Bond AE-10, AE-15, and GA-2 Adhesive Systems", included in each kit.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND GA-2 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- PCT-3M Gage Installation Tape
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Two-component, partially filled, 100%-solids epoxy system for general-purpose stress analysis. Higher viscosity than AE systems. Elevated-temperature cure recommended for best performance and resistance to

chemical attack. Often used to fill irregular surfaces. Uneven gluelines easily detectable by nonuniformity of bond color.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Long Term: -320° to +200°F (-195° to +95°C)
ELONGATION CAPABILITIES	4% at -320°F (-195°C), 10% to 15% at +75°F (+24°C) after 40-hr RT cure or 6-hr RT cure with postcure.
SHELF LIFE	Minimum 12 months at +75°F (+24°C); or 18 months at +40°F (+5°C). Refer to product label for most recent information.
POT LIFE	15 minutes at +75°F [+24°C]. Can be extended by cooling jar or by spreading adhesive on clean aluminum plate.
CLAMPING PRESSURE	5 to 20 psi (35 to 140 kN/m ²). The black filler provides a visual indication of nonuniform bond areas caused by uneven clamping pressure.
CURE REQUIREMENTS*	<p>Preferred Room Temperature Cure: 40 hours at +75°F (+24°C).</p> <p>Recommended Postcure: 2 hours at 25°F (15°C) above maximum operating temperature.</p>

PACKAGING
KIT
6 mixing jars (15 g ea) Resin, 6 calibrated pipettes, 1 bottle (15 ml) Curing Agent 10-A, 6 stirring rods

* **References:** Instruction Bulletin B-137, "Strain Gage Applications with M-Bond AE-10, AE-15, and GA-2 Adhesive Systems," included in each kit.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN RTC-2 EPOXY INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- CSP-1 Cotton Tip Swabs
- GSP-1 Gauze Sponges
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



DESCRIPTION

General-purpose, two-component, adhesive for lab and field applications with post-yield, high-elongation strain gages. Also excellent for cryogenic strain measurement applications.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452° to +200°F (-269° to +95°C).
ELONGATION CAPABILITIES	15% at +75°F (+24°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	30 minutes at +75°F (+24°C).
CLAMPING PRESSURE	5 to 20 psi (35 to 140 kN/m²).
CURE REQUIREMENTS*	6 hours at +75°F (+24°C), or 1 hour at +175°F (+80°C). Recommended Postcure (Unclamped): 1 hour at +120°F (+50°C), or 25°F (15°C) above maximum operating temperature.

PACKAGING	
KITS	
1 jar Part A [2 oz (56 gm)] 1 jar Part B [1 oz (28 gm)]	1 jar Part A [11 oz (308 gm)] 1 jar Part B [5 oz (140 gm)]

* **Reference:** Instruction Bulletin B-189 for complete details.

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND A-12 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- PCT-3M Gage Installation Tape
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT



DESCRIPTION

Two-component, 100%-solids epoxy system. Not intended as a general-purpose strain gage adhesive. Should be used only when maximum elongation requirements of a test exceed the capabilities of other M-Bond adhesive systems. Mixed adhesive gritty with large solid particles present; large particles must be removed prior to gage installation.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Long Term: -50° to +180°F (-45° to +80°C)
ELONGATION CAPABILITIES	15% to 20% at +75°F (+24°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	Approximately 1 hour.
CLAMPING PRESSURE	5 to 20 psi (35 to 140 kN/m ²).
CURE REQUIREMENTS*	2 hours at +165°F (+75°C), or 2 weeks at +75°F (+24°C).

PACKAGING
KIT
1 tube (55 grams) Part A component 1 tube (45 grams) Part B component 5 disposable mixing cups 5 wooden stirring sticks

* **Reference:** Instruction Bulletin B-184 for complete details.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND AE-15 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- PCT-3M Gage Installation Tape
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



DESCRIPTION

Two-component, 100%-solids epoxy system for generalpurpose stress analysis. Transparent, medium viscosity. Cure time as low as six hours at +125°F (+50°C). Recommended for more critical applications, including transducers. It has a longer pot life than M-Bond AE-10 which allows more time for multiple gage installations.

Elevated-temperature postcure is recommended for maximum stability, and/or tests above room temperature. Highly resistant to moisture and most chemicals, particularly when postcured. For maximum elongation, bonding surface must be roughened. Cryogenic applications require very thin gluelines.

CHARACTERISTICS		DETAILS
PARAMETER	DETAILS	
OPERATING TEMPERATURE RANGE	Long Term: -452° to +200°F (-269° to +95°C). Transducers: to +175°F (+80°C).	
ELONGATION CAPABILITIES	2% at -320° (-195°C), 10% to 15% at +75°F (+24°C), 15% at +200°F (+95°C).	
SHELF LIFE	Minimum 12 months at +75°F (+24°C); or 18 months at +40°F (+5°C). If crystals form in resin jar, heat to +120°F (+50°C) for 30 minutes. Cool before mixing. Refer to product label for most recent information.	
POT LIFE	1-1/2 hours at +75°F (+24°C).	
CLAMPING PRESSURE	5 to 20 psi (35 to 140 kN/m ²).	
CURE REQUIREMENTS*	Recommended Postcure: 2 hours at 25°F (15°C) above maximum operating temperature. Optimum Performance Transducer Postcure: 1 hour at +200°F (+95°C).	

PACKAGING	
KIT	BULK
6 mixing jars (10 g ea) Resin 1 bottle (15 ml) Curing Agent 15 6 calibrated pipettes 6 stirring rods	200 g Resin 25 g Curing Agent 15 3 calibrated pipettes

* **References:** Instruction Bulletin B-137, "Strain Gage Applications with M-Bond AE-10, AE-15, and GA-2 Adhesive Systems", included in each kit.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND GA-61 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Two-component, partially filled, 100%-solids epoxy adhesive for general-purpose stress analysis. Very high viscosity. Widely used to fill irregular surfaces and to anchor leadwires. Forms a very hard, chemical-resistant material when fully cured. Glueline thickness is generally <0.002 in (0.05 mm).

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Short Term: -100° to +600°F (-75° to +315°C) Long Term: -100° to +500°F (-75° to +260°C)
ELONGATION CAPABILITIES	1% at -100°F (-75°C), 2% at +75°F (+24°C), 1% at +500°F (+260°C).
SHELF LIFE	6 months minimum at +75°F (+24°C); refrigeration recommended. Refer to product label for most recent information.
MIXED POT LIFE	10 hours at +75°F (+24°C); increased by refrigeration, indefinite by freezing.
CLAMPING PRESSURE	10 to 30 psi (70 to 200 kN/m ²).
CURE REQUIREMENTS*	<p>Elevated Temperature Cure Required.</p> <p>Recommended Postcure: 1 hour at 50°F (30°C) above maximum operating temperature not to exceed +600°F (+315°C).</p>

PACKAGING
KIT
3 jars (10 g ea) Resin, 3 jars (5 g ea) Hardener, 3 stirring rods

* **References:** Instruction Bulletin B-128, "Strain Gage Applications with M-Bond GA-61 Adhesive", included in each kit.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN EPOXYLITE 813 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Two-part, 100%-solids, epoxy adhesive. Similar to GA-61, but serviceable to +600°F (+315°C). Excellent adhesion to metals, ceramics, and most composites.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Long Term: -320° to +600°F (-195° to +315°C)
ELONGATION CAPABILITIES	1% at +75°F (+24°C).
SHELF LIFE	Minimum 6 months at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	6 to 8 hours at +75°F (+24°C).
CLAMPING PRESSURE	30 to 70 psi (200 to 350 kN/m ²).
CURE REQUIREMENTS*	4 hours at +350°F (+175°C). Recommended Postcure (Unclamped): 1 hour at 25°F (15°C) above maximum operating temperature.

PACKAGING
KIT
6 bottles Part A [0.5 oz (18 gm)] Resin 6 bottles Part B [0.25 oz (7 gm)] Powder

* **Reference:** Instruction Bulletin B-174 for complete details.

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN EPY-500 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Swabs
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



DESCRIPTION

EPY-500 is a two-part, heat-curing, filled epoxy system that is specially formulated for Micro-Measurements. This adhesive has reduced particle size, allowing a much thinner glueline. The adhesive is compatible with all phenolic, epoxy-phenolic and polyimide strain gages.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452° to +500°F (-269° to +260°C).
SHELF LIFE	Minimum 9 months. Refer to product label for most recent information.
POT LIFE	24 hours.
STRAIN LIMIT—SINGLE CYCLE	5% at +75°F (+24°C); 1% at -320°F (-195°C).
CLAMPING PRESSURE	10 to 15 psi (70 to 105 kN/m ²).
CURE REQUIREMENTS*	26 hours at +200°F (+93°C); or 4 hours at +250°F (+121°C); or 1 hour at +350°F (+176°C); or 1/2 hour at +400°F (+204°C). Recommended Postcure: 1 hour at +450°F (+232°C).

PACKAGING
KIT
5 (10 g ea) packages

* **Reference:** Instruction Bulletin B-172 for complete details.

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN A QA-500 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Swabs
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



DESCRIPTION

QA-500 is a specially formulated two-component, clear liquid and powder adhesive for use with strain gages. QA-500 has excellent moisture and chemical resistance.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-320° to +500°F (-195° to +260°C).
SHELF LIFE	Minimum 9 months. Refer to product label for most recent information.
POT LIFE	24 hours.
STRAIN LIMIT—SINGLE CYCLE	2%
CLAMPING PRESSURE	20 to 30 psi (140 to 210 kN/m ²).
CURE REQUIREMENTS*	Minimum 2 hours at +250°F (+121°C). Postcure (Clamps Removed): 4 hours at +50°F (+28°C) above maximum operating or curing temperature, whichever is higher.

PACKAGING
SMALL KIT
3 jars (7 g ea) resin 3 jars (3 g ea) hardener 3 stirring rods

* **Reference:** Instruction Bulletin B-191 for complete details.

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Adhesive for Stress Analysis and Transducer Applications

OTHER ACCESSORIES USED IN AN M-BOND 610 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



DESCRIPTION

Two-component, solvent-thinned, epoxy-phenolic adhesive for high-performance applications, including high-precision transducers. Solids content 22%. Widest temperature range general-purpose adhesive available.

Low viscosity, capable of gluelines <0.0002 in (0.005 mm). Extremely thin, hard, void-free gluelines minimize creep, hysteresis, and linearity problems. Cure must begin within four hours of application.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	<p>Short Term: -452° to +700°F (-269° to +370°C).</p> <p>Long Term: -452° to +500°F (-269° to +260°C).</p> <p>Transducers: to +450°F (+232°C).</p>
ELONGATION CAPABILITIES	1% at -452° (-269°C), 3% at +75°F (+24°C), 3% at +500°F (+260°C).
SHELF LIFE	Minimum 9 months from date of manufacture on the label when stored unmixed at +75°F (+24°C); or minimum 15 months from the date of manufacture on the label when stored unmixed refrigerated upon receipt at +40°F (+5°C). Refrigerated storage recommended. Refer to product label.
POT LIFE	6 weeks at +75°F (+24°C); 12 weeks at +40°F (+5°C).
CLAMPING PRESSURE	10 to 70 psi (70 to 480 kN/m ²) Optimum: 30 to 40 psi (200 to 275 kN/m ²)
CURE REQUIREMENTS* FOR STRESS ANALYSIS	<div style="display: flex; align-items: center;"> <div style="margin-left: 20px;"> <p>Recommended Postcure: 2 hours at 50° to 75°F (30° to 40°C) above maximum operating temperature or cure temperature, whichever is higher.</p> </div> </div>
CURE REQUIREMENTS* FOR TRANSDUCERS	<p>Recommended Cure: *1 hour at +350°F (+177°C).</p> <p>Transducer Postcure: 2 hours at +400° to +450°F (+205° to +232°C) after wiring.</p> <p>*Altered for aluminum-alloy transducers. See Strain Gage Installation Procedures for Transducers.</p>

* **Reference:** Instruction Bulletin B-130 for complete details.

Strain Gage Adhesive for Stress Analysis and Transducer Applications

PACKAGING	
KIT	SINGLE MIX KIT
4 bottles (11 g ea) Curing Agent 4 bottles (14 g ea) Resin 4 brush caps for dispensing mixed adhesive 4 disposable mixing funnels	1 bottle (11 g ea) Curing Agent 1 bottle (14 g ea) Resin 1 brush cap for dispensing mixed adhesive 1 disposable mixing funnel

References: Instruction Bulletin B-130, "Strain Gage Installations with M-Bond 43-B, 600 and 610 Adhesive Systems," included in each kit.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND 600 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Similar to M-Bond 610 except with more reactive curing agent. Shorter shelf life, pot life, and working time than M-Bond 610, but has lower temperature cures and faster

reaction time. Cure must begin within 30 minutes of application (up to 4 hours for M-Bond 610).

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Short Term: -452° to +700°F (-269° to +370°C). Long Term: -452° to +500°F (-269° to +260°C).
ELONGATION CAPABILITIES	1% at -452° (-269°C), 3% at +75°F (+24°C), 3% at +500°F (+260°C).
SHELF LIFE	Minimum 3 months from date of manufacture on the label when stored unmixed at +75°F (+24°C); or minimum 9 months from the date of manufacture on the label when stored unmixed refrigerated upon receipt at +40°F (+5°C). Refrigerated storage recommended. Refer to product label.
POT LIFE	2 weeks at +75°F (+24°C); 4 weeks at +40°F (+5°C).
CLAMPING PRESSURE	10 to 70 psi (70 to 480 kN/m ²) Optimum: 30 to 40 psi (200 to 275 kN/m ²)
CURE REQUIREMENTS*	<p>Moderately Elevated-Temperature Cure Required. Recommended Postcure: 1 to 2 hours at 50°F (30°C) above maximum operating temperature.</p>

PACKAGING	
KIT	SINGLE MIX KIT
4 bottles (11 g ea) Curing Agent 4 bottles (8 g ea) Resin 4 brush caps for dispensing mixed adhesive 4 disposable mixing funnels	1 bottle (11 g ea) Curing Agent 1 bottle (8 g ea) Resin 1 brush cap for dispensing mixed adhesive 1 disposable mixing funnel

* **References:** Instruction Bulletin B-130, "Strain Gage Installations with M-Bond 43-B, 600 and 610 Adhesive Systems," included in each kit.

Strain Gage Adhesive for Stress Analysis and Transducer Applications

OTHER ACCESSORIES USED IN AN M-BOND 43-B INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Single-component, solvent-thinned, epoxy adhesive normally used in transducer applications; solids content 25%. May be used both as an adhesive and as a

protective coating. Capable of forming very thin, hard, void-free gluelines similar to M-Bond 610. Highly resistant to moisture and chemical attack.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Short Term: -452° to +350°F (-269° to +175°C) Long Term: -452° to +300°F (-269° to +150°C) Transducers: to +250°F (+120°C).
ELONGATION CAPABILITIES	1% at -452°F (-269°C), 4% at +75°F (+24°C), 2% at +300°F (+150°C).
SHELF LIFE	13 months from the date of manufacture on the label (minimum published 9 months) when stored unmixed at +75°F (+24°C); or 22 months from the date of manufacture on the label (minimum published 18 months) when stored unmixed refrigerated upon receipt at +40°F (+5°C). Refer to product label.
POT LIFE	Minimum 9 months at +75°F (+24°C); or 18 months at +40°F (+5°C).
CLAMPING PRESSURE	For Stress Analysis: 15 to 100 psi (100 to 700 kN/m ²). Optimum: 40 to 50 psi (275 to 350 kN/m ²). For Transducers: 45 to 60 psi (315 to 415 kN/m ²). Optimum: 50 psi (350 kN/m ²).
CURE REQUIREMENTS*	2 hours at +375°F (+190°C), or as an alternate cure for aluminum alloy transducers, 2-1/2 hours at +300°F (+150°C). Recommended Postcure: 2 hours at +400°F (+205°C), or as an alternate postcure for aluminum alloy transducer applications, 2-1/2 hours at +350°F (+175°C).

PACKAGING	
KIT	SINGLE BOTTLE
4 brush-cap bottles (30 ml ea) premixed adhesive	1 brush-cap bottle (30 ml ea) premixed adhesive

* **Reference:** Instruction Bulletin B-130, "Strain Gage Installations with M-Bond 43-B, 600 and 610 Adhesive Systems", included in each kit.

Mylar and Teflon are Registered Trademarks of DuPont

Strain Gage Adhesive for Stress Analysis and Transducer Applications

OTHER ACCESSORIES USED IN AN M-BOND 450 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Applicators
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

High-performance, two-component, solvent-thinned epoxy system specially formulated for high accuracy, elevated-temperature transducer applications.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Short Term: -452° to +750°F (-269° to +400°C) Long Term: -452° to +500°F (-269° to +260°C)
ELONGATION CAPABILITIES	>5% at +75°F (+24°C).
SHELF LIFE	6 months at +75°F (+24°C)
POT LIFE	6 weeks at +75°F (+24°C)
CLAMPING PRESSURE	60 to 100 psi (4 to 6 bar)
CURE REQUIREMENTS*	<p>Step 1: Air dry at +75°F (+24°C) 10 to 30 min</p> <p>B-Stage: +225°F (+105°C) for 30 min</p> <p>Cure: +350°F (+175°C) for 1 hour</p> <p>Recommended Postcure for Stress Analysis: 1 hour at 50°F (30°C) above max operating temperature in 50°F (30°C) increments from +350°F (+175°C), dwelling 1 hour at each step.</p> <p>Recommended Postcure for Transducers: 1 hour at 50°F (30°C) above max operating temperature or cure temperature, whichever is higher.</p>

PACKAGING
KIT
4 bottles (12.7 g ea) Curing Agent 4 bottles (11.9 g ea) Resin 4 brush caps for applying adhesive 4 disposable mixing funnels

* **Reference:** M-M Instruction Bulletin B-152, "Instructions for the Application of Micro-Measurements M-Bond 450 Adhesive", included in each kit.

Reference: M-M Strain Gage Accessories databook.

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN A DENEX #3 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Single-component, solvent thinned epoxy adhesive used in laboratory and transducer applications where negligible creep can be tolerated. Can be solvent

thinned (acetone) for easy application. Lower creep at elevated temperatures. Can be B-staged or dried prior to clamped curing.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452° to +400°F (-269°C to +204°C)
ELONGATION CAPABILITY	1% at +75°F (+24°C)
SHELF LIFE	Minimum 3 months @ +75°F (+24°C); minimum 6 months @ +40°F (+5°C). Refer to produce label for most recent information.
CLAMPING PRESSURE	30 to 50 psi (200 to 350 kN/m ²)
CURE REQUIREMENTS*	<p>Recommended Cure:</p> <p>Laboratory Use: 1 hour at +250°F (+120°C), followed by 1 hr at +350°F (+175°C)</p> <p>Transducers: 4 hours at +325°F (+163°C)</p> <p>Postcure (Unclamped):</p> <p>Laboratory Use: 1 hour at 75°F (40°C) above maximum operating temperature</p> <p>Transducers: 4 hours at +350°F (+175°C)</p>

PACKAGING
1 brush cap bottle (1/2 oz/15 ml) of premixed adhesive
1 brush cap bottle (1 oz/30 ml) of premixed adhesive
4 brush cap bottles (1 oz/30 ml each) premixed adhesive
1 bottle (32 oz/950 ml) premixed adhesive

* **Reference:** Instruction Bulletin B-173 for complete details.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN P ADHESIVE INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- CSP-1 Cotton Tip Swabs
- GSP-1 Gauze Sponges
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT

DESCRIPTION

Single-part, solvent-thinned, polyimide adhesive. Results in a strong, thin, near-creep-free, adhesive layer.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452° to +700°F (-270° to +370°C). Upper Limit: +800°F (+427°C) for 1 to 2 hours.
ELONGATION CAPABILITIES	2% at +75°F (+24°C).
SHELF LIFE	Minimum 4 months at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	Minimum 4 months at +75°F (+24°C).
CLAMPING PRESSURE	20 to 40 psi (140 to 280 kN/m ²).
CURE REQUIREMENTS*	For two minutes, expose the adhesive on the strain gage and test article to an infrared lamp or other heat source until the materials are dry. Monitor the temperature of the surface and do not allow materials to exceed +250°F (+120°C). After clamping, cure 2 hours at +250°F (+120°C), increase temperature to +300°F (+150°C) for 2 hours, increase temperature to +340°F (+170°C) for 2 hours and finish cure with 4 hours at +380°F (+195°C). Recommended Postcure (Unclamped): 1 hour at +300°F (+150°C), followed by 2 hours at +400°F (+205°C), and then 4 hours at +500°F (+260°C).

PACKAGING
KIT
1 brush-cap bottle [1 oz (30 ml)]

* **Reference:** Instruction Bulletin B-181 for complete details.

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Adhesive

OTHER ACCESSORIES USED IN AN M-BOND 300 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Tip Applicators
- PCT-3M Gage Installation Tape
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates



RoHS
COMPLIANT



DESCRIPTION

Special-purpose, two-component polyester adhesive. Not recommended as a general-purpose strain gage adhesive, but useful when a low-temperature-curing adhesive is required. While possessing the high shear strength required of a strain gage adhesive, peel strength and solvent sensitivity are relatively poor. Should not be used for impact strain measurements, or with solvent thinned protective coatings.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	Long Term: -40° to +300°F (-40° to +150°C)
ELONGATION CAPABILITIES	1% to 2% at +75°F (+24°C).
SHELF LIFE	Minimum 4 months at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	15 to 20 minutes at +40°F (+5°C); 5 to 8 minutes at +75°F (+24°C).
CLAMPING PRESSURE	5 to 20 psi (35 to 140 kN/m ²).
CURE REQUIREMENTS*	24 hours at +40°F (+5°C); 18 hours at +60°F (+15°C); 12 hours at +75°F (+24°C).

PACKAGING
KIT
6 mixing jars (10 g ea) Resin 6 calibrated pipettes 1 bottle (6 g) Catalyst 6 stirring rods

* **Reference:** Instruction Bulletin B-133, "Strain Gage Installations with M-Bond 300 Adhesive", included in each kit.

Strain Gage Cement

OTHER ACCESSORIES USED IN AN NCC-3 CEMENT INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- GT-11 Camel Hair Brush
- SPT-1 Double Blade Spatula



RoHS
COMPLIANT

DESCRIPTION

Single-part, silica-based ceramic cement for use with ZC-, ZWH-, and ZWN-Series high-temperature strain gages. Has superior bond strength to super-alloy materials, stainless steel, titanium, and other nonferrous alloys. **Not for use on mild steel.**

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452°F to +1470°F (-269° to +800°C).
ELONGATION CAPABILITIES	0.5% at +75°F (+24°C).
SHELF LIFE	12 months after date of manufacture. Store at +75°F (+24°C).
POT LIFE	2 weeks after opening. Refer to product label for most recent information.
TEMPERATURE COEFFICIENT OF EXPANSION	7 ppm/°F (12.6 ppm/°C).
CURE REQUIREMENTS	<p>Precoat: Air-dry 30 minutes at +75°F (+24°C). Bake at +200°F (+93°C) for 30 minutes. Increase temperature to 400°F (204°C) for 30 minutes. Increase temperature to 600°F (315°C) for 30 minutes.</p> <p>Final Cure: Air-dry 30 minutes at +75°F (+24°C). Bake at +200°F (+93°C) for 30 minutes. Increase temperature to 400°F (204°C) for 30 minutes. Increase temperature to 600°F (315°C) for 30 minutes.</p>

PACKAGING OPTION
1 bottle (1 oz/30 ml) cement

Strain Gage Cement

OTHER ACCESSORIES USED IN AN WC-16 CEMENT INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- GT-11 Camel Hair Brush
- SPT-1 Double Blade Spatula



DESCRIPTION

Single-part, alumina-based ceramic cement for use with ZC-, ZWH-, and ZWN-, and ZWP-Series high-temperature strain gages on materials with low thermal expansion coefficients. **Not for use on steel or other iron-based alloys.**

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452°F to +1470°F (-269° to +800°C). Higher upper temperatures can be achieved on ceramic parts up to 2190°F (1200°C).
ELONGATION CAPABILITIES	0.5% at +75°F (+24°C).
SHELF LIFE	12 months after date of manufacture. Store at +75°F (+24°C).
POT LIFE	2 weeks after opening. Refer to product label for most recent information.
TEMPERATURE COEFFICIENT OF EXPANSION	4 ppm/°F (7.2 ppm/°C).
CURE REQUIREMENTS	<p>Precoat: Air-dry 30 minutes at +75°F (+24°C). Bake at +200°F (+93°C) for 30 minutes. Increase temperature to 400°F (204°C) for 30 minutes. Increase temperature to 600°F (315°C) for 30 minutes.</p> <p>Final Cure: Air-dry 30 minutes at +75°F (+24°C). Bake at +200°F (+93°C) for 30 minutes. Increase temperature to 400°F (204°C) for 30 minutes. Increase temperature to 600°F (315°C) for 30 minutes.</p>

PACKAGING OPTION
1 bottle (1 oz/30 ml) cement

Strain Gage Cement

OTHER ACCESSORIES USED IN AN HG-1 CEMENT INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- GT-11 Camel Hair Brush
- SPT-1 Double Blade Spatula



DESCRIPTION

Single-part ceramic cement for use with ZC-, ZWH-, and ZWN-Series high-temperature strain gages. Bonds well to most metals and porous ceramics. Thermal expansion coefficient closely matches that of steel. Contains Chromium VI. **Contains a substance which is restricted in the European Union.**

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452°F to +1470°F (-269° to +800°C).
ELONGATION CAPABILITIES	0.5% at +75°F (+24°C).
SHELF LIFE	6 months after date of manufacture. Store at +75°F (+24°C).
POT LIFE	2 weeks after opening. Refer to product label for most recent information..
TEMPERATURE COEFFICIENT OF EXPANSION	6 ppm/°F (10.8 ppm/°C).
CURE REQUIREMENTS	<p>Precoat: Air-dry 30 minutes at +75°F (+24°C). Bake at +200°F (+93°C) for 30 minutes. Increase temperature to 400°F (204°C) for 30 minutes. Increase temperature to 600°F (315°C) for 30 minutes.</p> <p>Final Cure: Air-dry 30 minutes at +75°F (+24°C). Bake at +200°F (+93°C) for 30 minutes. Increase temperature to 400°F (204°C) for 30 minutes. Increase temperature to 600°F (315°C) for 30 minutes.</p>

PACKAGING OPTION
1 bottle (1 oz/30 ml) cement

Strain Gage Cement

OTHER ACCESSORIES USED IN A GC CEMENT INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- GT-11 Camel Hair Brush
- SPT-1 Double Blade Spatula



RoHS
COMPLIANT

DESCRIPTION

Single-part ceramic cement for bonding free-filament strain gages (wire and foil). Recommended for installations on low-TCE materials such as carbon.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-320°F to +2000°F (-195° to +1093°C).
ELONGATION CAPABILITIES	0.5% at +75°F (+24°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	1 year at +75°F (+24°C).
TEMPERATURE COEFFICIENT OF EXPANSION	1.5 ppm/°F (2.7 ppm/°C).
CURE REQUIREMENTS*	<p>Precoat: Air-dry 30 minutes at +75°F (+24°C), then 30 minutes at +200°F (+95°C) followed by 30 minutes at +300°F (+150°C).</p> <p>Final Coat: Air-dry 30 minutes at +75°F (+24°C), then 30 minutes at +200°F (+95°C) followed by 30 minutes at +300°F (+150°C), and final 1 hour at +600°F (+315°C).</p>

PACKAGING OPTIONS
KIT
1 bottle (1 oz/30 ml) premixed.

* **Reference:** Instruction Bulletin B-177 for complete details.

Strain Gage Cement

OTHER ACCESSORIES USED IN A PBX CEMENT INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- GT-11 Camel Hair Brush
- SPT-1 Double Blade Spatula



DESCRIPTION

Two-part ceramic cement/coating with excellent electrical insulating properties up to +1200°F (+650°C). Recommended as a high-temperature cement and coating for free-filament strain gages (wire and foil) and thermocouple applications. Provides good adhesion to most metals. **Contains a substance which is restricted in the European Union.**

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452°F to +1200°F (-269° to +650°C).
ELONGATION CAPABILITIES	0.5% at +75°F (+24°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
TEMPERATURE COEFFICIENT OF EXPANSION	7.0 ppm/°F (13 ppm/°C).
CURE REQUIREMENTS*	<p>Precoat: Air-dry 30 minutes at +75°F (+24°C), then 30 minutes at +200°F (+95°C) followed by 30 minutes at +300°F (+150°C).</p> <p>Final Coat: Air-dry 30 minutes at +75°F (+24°C), then 30 minutes at +200°F (+95°C) followed by 30 minutes at +300°F (+150°C), and final 1 hour at +600°F (+315°C).</p>

PACKAGING OPTIONS
KIT
1 jar powder (1 lb/454 gm) 1 bottle solvent (9 oz/279 ml)

* **Reference:** Instruction Bulletin B-179 for complete details.

Strain Gage Cement

OTHER ACCESSORIES USED IN A SAUEREISEN DKS-8 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- CSP-1 Cotton Tip Swabs
- GSP-1 Gauze Sponges
- GT-11 Camel Hair Brush
- SPT-1 Double Blade Spatula



RoHS
COMPLIANT

DESCRIPTION

Single-part chemical-setting, inorganic, Zircon-based cement supplied as a powder and mixed with water. High electrical-insulation and thermal-conductivity values. Used for installing high-temperature free-filament strain gages.

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-452°F to +2500°F (-269° to +1370°C).
ELONGATION CAPABILITIES	0.5% at +75°F (+24°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
POT LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.
TEMPERATURE COEFFICIENT OF EXPANSION	2.6 ppm/°F (4.7 ppm/°C).
CURE REQUIREMENTS*	18 to 24 hours at +75°F (+24°C). Application of heat will accelerate cure time.
RECOMMENDED POSTCURE (UNCLAMPED)	1 hour at 50°F (30°C) above maximum operating temperature.

PACKAGING OPTION
KIT
1 bottled powder (4 oz/115 gm)

* **Reference:** Instruction Bulletin B-182 for complete details.

Installation Tools and Accessories

CONTENTS

Tools

SSH-1	46
STW-1	46
BTW-1	46
DPR-1	46
SSC-1	46
SSC-2	46
SSS-1	46
SSS-2	46
DP-1	46
DWC-1	46
NNP-1	46
ATS-2	46
GT-11	47
SPT-1	47
SPT-2	47
MHG-1	47
MHG-2	47

General-Purpose Tapes and Materials

PCT-2M	47
PDT-3	47
PLY-001	47

High-Temperature Tapes and Materials

MJG-2	48
TFT-2	48
FGC-1	48
TFE-2	48



Clamping Supplies

HSC-1	48
HSC-2	48
HSC-3	48
GT-12	48
TFE-1	48
GT-14	48
SGP-1	48
SGP-2	48

General Information and Selection

There is a strong element of craftsmanship involved in making consistently successful strain gage installations. As for any other field, this craft has its own special tools and working materials—found by seasoned professionals to be most effective for achieving the desired results. The installation accessories described on this and the following pages represent the distillation of many years' experience in determining the most appropriate tool or material for each task in the gage installation process.

Every accessory item listed here has been thoroughly tested and evaluated in the Micro-Measurements Applications Engineering Laboratory for quality and reliability, for ease of use, and for compatibility with all other Micro-Measurements products. It should be noted that the instruction bulletins supplied for gages, adhesives, protective coatings, etc. assume the availability of these accessories to the user, since such is generally the case for an experienced practitioner in a well-equipped laboratory.





TOOLS	
 <p>SSH-1 STW-1 BTW-1 DPR-1 SSC-1</p>	<p>SSH-1 SURGICAL SHEARS: Chromium steel, 4-1/2 in (115 mm) long, with one sharp pointed blade and one blunt-end blade.</p> <p>STW-1 TWEEZERS: Stainless steel, 4-1/2 in (115 mm) long. Rugged, precision ground sharp ends. Primarily used for handling leadwires.</p> <p>BTW-1 TWEEZERS: Stainless steel, 4-1/2 in (115 mm) long. Antimagnetic; acid and corrosion resistant. Thin, flat blunt ends ideal for safe handling of strain gages.</p> <p>DPR-1 DENTAL PROBE: Stainless steel “pick”. Flexible 75° pointed tip.</p> <p>SSC-1 SURGICAL SCALPEL AND BLADE: Stainless steel, uses SSC-2 snap-in replacement blade.</p>
 <p>SSS-1 SSS-2 DP-1 DWC-1 NNP-1</p>	<p>SSC-2 REPLACEMENT SCALPEL BLADES: Five blades per package. Not shown.</p> <p>SSS-1 STEEL SCALE: 6 in (150 mm) long, satin-chromed finish. Graduated in inches (1/32, 1/64, 1/10, 1/100).</p> <p>SSS-2 STEEL SCALE: 6 in (150 mm) long, satin-chromed finish. Graduated in inches (1/10, 1/100) and millimeters (0.5, 1).</p> <p>DP-1 4-H DRAFTING PENCIL: For gage layout.</p> <p>DWC-1 DIAGONAL CUTTERS: Stainless steel, 4-1/2 in (115 mm) long, precision cutter for wire up to AWG No. 18 (1 mm diameter).</p> <p>NNP-1 NEEDLE-NOSED PLIERS: Nickel-chrome plated, 4-1/2 in (115 mm) long, with serrated needle-nosed jaws.</p>
	<p>ATS-2 GAGE APPLICATION TOOL SET: Includes one of each item plus one additional DPR-1 Dental Probe. Durable, polypropylene box. Not shown.</p>









General Information and Selection

TOOLS	
<p>GT-11 </p> <p>SPT-1 </p> <p>SPT-2 </p> <p>MHG-1 </p>	<p>GT-11 CAMEL'S HAIR BRUSH 3/8 in (9.5 mm).</p> <p>SPT-1 STAINLESS STEEL MIXING SPATULA Double blade. Overall length 8 in (200 mm).</p> <p>SPT-2 STAINLESS STEEL MIXING SPATULA: Single blade. Overall length 7-3/4 in (195 mm). Wooden handle.</p> <p>MHG-1 MASTER MITE HEAT GUN: Lightweight, compact, perfectly balanced. 2 lb (0.9 kg) with nozzle attached. 8-7/8 x 7 in (225 x 180 mm). Quiet, brush- less-type shaded pole motor rated for continuous duty. Three interchangeable nozzle heating elements control average outlet temperature 1/2 in (13 mm) from nozzle at +500°F (+260°C), +650°F (+345°C), or +800°F (+425°C). Air- cooled barrel. Three-conductor grounded linecord. Slip-on deflector completely surrounds shrinkable tubing (HST-1) with heat. Pinpoint adapter directs heat without affecting adjacent areas. 120Vac, 60Hz. Maximum current draw 5.4 amps.</p> <p>MHG-2 MASTER MITE HEAT GUN: Same as above, except 220 Vac.</p>

GENERAL-PURPOSE TAPES AND MATERIALS	
<p>PLY-001 </p> <p>PDT-3 </p> <p>PCT-3MD </p>	<p>PCT-3M GAGE INSTALLATION TAPE: For gage handling. Compatible with the cure temperature ranges of all MM adhesives up to 400°F (204°C). 3/4 in x 72 yd (19 mm x 65 m). Three ordering options: PCT-3M: Tape only. PCT-3MD: Tape and hand dispenser*. PCT-3D: Hand dispenser* only. *This portable, high impact, durable plastic hand-held tape dispenser features a hand brake in the core.</p> <p>PDT-3 PAPER DRAFTING TAPE: For soldering mask, and lead positioning. 0.75 in x 400 in (19 mm x 10.1 m).</p> <p>PLY-001 Kapton® Film: For electrical insulation, 4 x 10 x 0.001 in thick (100 x 250 x 0.02 mm thick).</p> <p>Store all at or near +75°F (+24°C).</p>

General Information and Selection

HIGH-TEMPERATURE TAPES AND MATERIALS	
 <p>MJG-2</p>	 <p>TFT-2</p>
 <p>FGC-1</p>	 <p>TFE-2</p>
<p>MJG-2 MYLAR® TAPE: For gage handling with heat-curing resin systems. Compatible with the cure temperature ranges of all MM adhesives up to 400°F (204°C). 1/2 in x 216 ft (13 mm x 66 m).</p> <p>TFT-2 THERMOSETTING [+340°F (+170°C)] FIBERGLASS TAPE: For electrical insulation at high temperatures. 1/2 in x 180 ft (13 mm x 55 m).</p> <p>FGC-1 WOVEN FIBERGLASS CLOTH: Bound edges. For lead anchoring when used in conjunction with M-Bond adhesives and M-Coat protective coatings. 0.015 in x 1 in x 50 yd (0.4 mm x 25 mm x 46 m).</p> <p>TFE-2 HIGH MODULUS TFE TEFLON® WITH SILICONE MASTIC: 1/2 in x 108 ft (13 mm x 33 m).</p> <p>Store all at or near +75°F (+24°C).</p>	

CLAMPING SUPPLIES	
 <p>HSC-1</p>	 <p>HSC-2</p>
 <p>HSC-3</p>	
<p>HSC-1 SPRING CLAMP: <i>Maximum Opening:</i> 1 in (25 mm). <i>Maximum Recommended Opening:</i> 1/2 in (13 mm). <i>Nominal Clamp Force at Recommended Opening:</i> 20 lbf (89 N).</p> <p>HSC-2 SPRING CLAMP: <i>Maximum Opening:</i> 2 in (51 mm). <i>Maximum Recommended Opening:</i> 1 in (25 mm). <i>Nominal Clamp Force at Recommended Opening:</i> 24 lbf (107 N).</p> <p>HSC-3 SPRING CLAMP: <i>Maximum Opening:</i> 3 in (76 mm). <i>Maximum Recommended Opening:</i> 1-1/2 in (38 mm). <i>Nominal Clamp Force at Recommended Opening:</i> 30 lbf (133 N).</p>	
 <p>GT-12</p>	 <p>TFE-1</p>
 <p>SGP-2</p>	 <p>GT-14</p>
 <p>SGP-1</p>	
<p>GT-12 NEG'ATOR CONSTANT FORCE EXTENSION SPRING CLAMP: 1 x 0.006 x 38 in (25 mm x 0.4 mm x 0.97 m) stainless steel band, drum I.D. 1.16 in (30 mm), 10.6 lb (47 N) load.</p> <p>TFE-1 TEFLON FILM: 0.003 in x 1 in x 50 ft (0.08 mm x 25 mm x 15 m).</p> <p>GT-14 PRESSURE PADS AND BACKUP PLATES: Kit of 12 Silicone Rubber Pads 3/32 x 1/2 x 1-1/4 in (2.5 x 13 x 32 mm), and 12 aluminum plates, 1/8 x 1/2 x 1-1/4 in (3 x 13 x 32 mm).</p> <p>SGP-1 SILICONE RUBBER: Three pieces, each 3/32 x 1 x 6 in (2.5 x 25 x 150 mm).</p> <p>SGP-2 SILICONE RUBBER: One piece, 3/32 x 6 x 6 in (2.5 x 150 x 150 mm).</p>	

Mylar and Teflon are Registered Trademarks of DuPont.

Bondable Terminals

CONTENTS

CEG-25C	50
CPF-25C	50
CEG-38C	50
CPF-38C.....	50
CEG-50C	50
CPF-50C.....	50
CEG-75C	50
CPF-75C.....	50
CEG-100C	50
CPF-100C.....	50
CEG-150C	50
CPF-150C.....	50
CEG-50D	51
CPF-50D.....	51
CEG-60D	51
CPF-60D.....	51
CEG-75D	51
CPF-75D.....	51
CEG-100D	51
CPF-100D.....	51
CPF-AST	51
CEG-21S	51
CEG-42S	51
CEG-63S	51
CEG-83S	51

Terminal Details and Descriptions


For many types of strain gages (i.e., Micro-Measurements EA-Series), instrument leadwires generally should not be attached directly to the solder tabs of the gage. Instead, the normal practice is to install bondable terminals adjacent to the gage and solder the instrument leadwires to these. Small, flexible jumper wires, curved to form strain relief loops, are then connected from the terminals to the gage solder tabs. The accompanying drawings show typical strain gage terminal installations (see also Application Note TT-603. "The Proper Use of Bondable Terminals in Strain Gage Applications").



RoHS
COMPLIANT

TERMINAL CONSTRUCTION

Micro-Measurements bondable terminals are specially designed for use in strain gage circuits. They are produced from 0.0014-in (0.036-mm) thick, copper foil, laminated on either of two types of backing material. Both backings are readily bondable with strain gage adhesives. Terminals are offered in four different geometries, and in a range of sizes to suit varying gage installation needs.

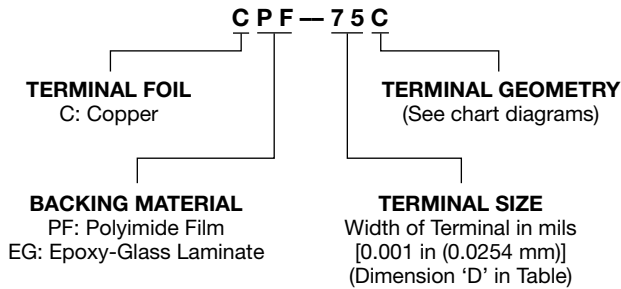

BACKING MATERIALS

TYPE PF POLYIMIDE FILM:






0.003 in (0.08 mm) thick. This is the preferred general-purpose backing material. It is more flexible and conformable than the Type EG, although not as strong. Type PF backing combines high-temperature capability, resistance to soldering damage and good electrical properties. It is suitable for long-term use at +450° to +500°F (+230° to +260°C), limited primarily by gradual oxidation of the copper foil interface. The relatively high thermal expansion coefficient of unfilled polyimide can cause loss of bond at temperatures below -100°F (-75°C).

TYPE EG EPOXY-GLASS LAMINATE:




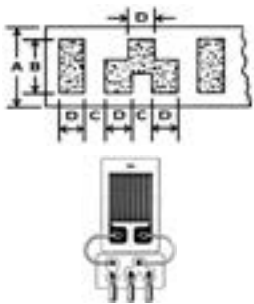

0.005 in (0.13 mm) thick. This special laminate provides a strong but flexible backing for terminals. It is suitable for long-term use at +300°F (+150°C), and is recommended for cryogenic applications at temperatures down to -452°F (-269°C). The radius of curvature of the mounting surface should generally be greater than 1/8 in (3 mm).

Terminal Detail and Description	Terminal Pattern (Actual Size)	Dimensions "A" dimensions nominal				Order Number	Package Strips of 4 Pairs
		A	B	C	D		
<p>Suffix C: General-purpose. Widely used between gage jumper wires and main leadwire system. Suitable for many bridge intraconnection applications.</p>		0.11 (2.7)	0.065 (1.65)	0.025 (0.64)	0.025 (0.64)	CEG-25C CPF-25C	70
		0.14 (3.4)	0.095 (2.41)	0.030 (0.76)	0.038 (0.97)	CEG-38C CPF-38C	60
		0.18 (4.5)	0.125 (3.18)	0.036 (0.91)	0.050 (1.27)	CEG-50C CPF-50C	50
		0.25 (6.4)	0.190 (4.83)	0.040 (1.02)	0.075 (1.91)	CEG-75C CPF-75C	30
		0.33 (8.4)	0.250 (6.35)	0.070 (1.78)	0.100 (2.54)	CEG-100C CPF-100C	20
		0.48 (12.1)	0.375 (9.53)	0.070 (1.78)	0.150 (3.81)	CEG-150C CPF-150C	10

Terminal Details and Descriptions

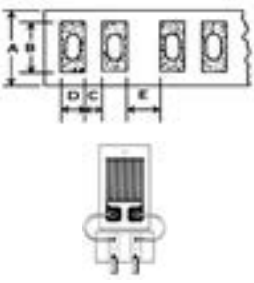Terminal Detail and Description	Terminal Pattern (Actual Size)	Dimensions "A" dimensions nominal				Order Number	Package Strips of 4 Pairs
		A	B	C	D		
 <p>Suffix D: Designed for installations with 2-wire jumper arrangement to gage and a 3-wire main lead system.</p>		0.18 (4.5)	0.125 (3.18)	0.036 (0.91)	0.050 (1.27)	CEG-50D CPF-50D	30
		0.21 (5.3)	0.150 (3.81)	0.038 (0.97)	0.060 (1.52)	CEG-60D CPF-60D	25
		0.25 (6.4)	0.190 (4.83)	0.040 (1.02)	0.075 (1.91)	CEG-75D CPF-75D	20
		0.33 (8.4)	0.250 (6.35)	0.050 (1.27)	0.100 (2.54)	CEG-100D CPF-100D	15

Terminal Assortment	Order Number	Package Strips of 4 Pairs
Contains 2 strips of C and D patterns, except 1 strip of the 150C and 100D designs	CPF-AST	18

Terminal Detail and Description	Terminal Pattern (Actual Size)	Dimensions "A" dimensions nominal					Order Number	Package Pairs
		A	B	C	D	E		
 <p>Suffix S: Primarily used where soldering and desoldering may be encountered. Hole in center produces thermal isolation at each end of terminal. Not recommended for high cyclic endurance. Available only in epoxy-glass backing.</p>		0.13 (3.2)	0.063 (1.60)	0.021 (0.53)	0.021 (0.53)	0.042 (1.07)	CEG-21S	200
		0.21 (5.2)	0.125 (3.18)	0.042 (1.07)	0.042 (1.07)	0.084 (2.13)	CEG-42S	100
		0.29 (7.4)	0.190 (4.83)	0.063 (1.60)	0.063 (1.60)	0.126 (3.20)	CEG-63S	100
		0.37 (9.4)	0.250 (6.35)	0.083 (2.11)	0.083 (2.11)	0.166 (4.22)	CEG-83S	60

Solders and Accessories

CONTENTS

Solders

361A-20R	54
361-40R.....	54
430-20S.....	54
450-20R.....	54
450-20S.....	54
570-28R.....	54
1240-FPA.....	54

Flux and Rosin Solvent Kits

FAR-2	55
AR-2	55
RSK-1	55
RSK-2	55
RSK-4	55
FSS-1	55


Soldering Units

M5S-1.....	55
M5S-2	55
M5S-4.....	55
M5S-4A	55
M5S-4B	55
M5S-4C	55
M5S-4D	55
M5S-4E	55
WRS-1	56
WRS-2	56
WRS-3	56

Solders, Fluxes, Kits, and Soldering Unit

The quality of the solder joints is a critical element in the performance of any strain gage installation. Because of special requirements associated with strain gage circuitry, many commercial solders and fluxes are not satisfactory for this purpose. Micro-Measurements stocks and distributes a selection of solders and fluxes that have been carefully tested and qualified for use with strain gages.

applications. For ordering purposes, the solders are specified according to the coding system shown at right. All solders are supplied on spools, except for the 1240-FPA paste, which is supplied in a jar.

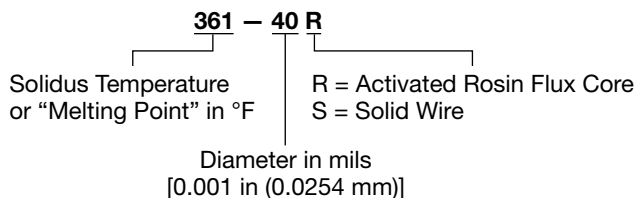

SOLDERS

Strain gage solders are listed at right, along with their compositions, principal properties, and recommended

SOLDER SELECTION CHART							
Solder Type (See Note 1)	Packaging		Solidus/ Liquidus Temperature	Wetting and Flow	Mech. Strength	Electrical Conductivity	Corrosion Resistance
	Order No.	Unit Size					
361A-20R 63%Tin 36.65% Lead 0.35% Antimony	361A-20R-25	25 ft (7.6 m)	361°/361°F [183°/183°C]	Excellent	Very Good	High	Good
	361A-20R	1 lb (450 g)					
Best all-around solder for general use. Also capable of use at cryogenic temperature. Three-year shelf life.							
361-40R 63%Tin 37% Lead	361-40R-15	15 ft (4.6 m)	361°/361°F [183°/183°C]	Excellent	Very Good	High	Good
	361-40R	1 lb (450 g)					
General use with heavy leadwires. Not recommended for use at cryogenic temperatures. Three-year shelf life.							
430-20S 96.3% Tin 3.7% Silver	430-20S-25	25 ft (7.6 m)	430°/430°F [221°/221°C]	Excellent	Very Good	Best	Excellent
	430-20S	1 lb (450 g)					
Recommended for use where high electrical conductivity is required. Good mechanical fatigue properties. Do not use at cryogenic temperatures. Shelf life is indefinite.							
450-20R 95% Tin 5% Antimony	450-20R-25	25 ft (7.6 m)	450°/460°F [232°/238°C]	Excellent	Very Good	High	Good
	450-20R	1 lb (450 g)					
Higher temperature solder with very good handling properties. Can be used with M-Flux AR or M-Flux SS. Presence of antimony prevents "tin disease"; can be used in cryogenic environments, although quite brittle at low temperatures. Three-year shelf life.							
450-20S 95% Tin 5% Antimony	450-20S-25	25 ft (7.6 m)	450°/460°F [232°/238°C]	Excellent	Very Good, Hard	High	Good
	450-20S	1 lb (450 g)					
Higher temperature solder with very good handling properties. Can be used with M-Flux AR or M-Flux SS. Presence of antimony prevents "tin disease"; can be used in cryogenic environments, although quite brittle at low temperatures. Shelf life is indefinite.							
570-28R 93.5% Lead 5% Tin 1.5% Silver	570-28R-20	20 ft (6.1 m)	565°/574°F [296°/301°C]	Very Good	Very Good, Hard	Fair	Fair
	570-28R	1 lb (450 g)					
High-lead content. For high-temperature connections and long-term use at cryogenic temperature. Three-year shelf life.							
1240-FPA 40% Silver 28% Zinc 30% Copper 2% Nickel	1240-FPA	1 oz (28 g)	1220°/1435°F (660°/780°C)	Excellent	Excellent	High	Good
	For very-high-temperature solder joints, generally with WK-Series strain gages. The WRS-1 Resistance Soldering Unit is an ideal tool for use with this solder. Has a shelf life of 9 months.						

Note 1: Products shown in bold are RoHS compliant.

Solders, Fluxes, Kits, and Soldering Unit

FLUXES

With solid wire solders, it is necessary to use separate, externally applied fluxes. Even with rosin-core solders, flux may be helpful when soldering fine jumper wires to gage tabs or printed-circuit terminals, because not enough flux is released from the cored solder. It may also be necessary to supplement the cored flux in high-temperature solders such as Type 570.


Two fluxing compounds are available for strain gage soldering applications. M-Flux AR-2 is an active but noncorrosive rosin flux that is effective on constantan, copper, and nickel. M-Flux SS is a very active acid flux

that is used primarily with solid-wire solders applied to isoelastic and K-alloy gages, and to stainless steel. The two fluxes should never be mixed. Whether the rosin or acid flux is used, it must be completely removed immediately after soldering to prevent degradation of protective coatings and corrosion of the metals, and to eliminate conductive flux residues. Rosin residues are best removed with *M-LINE* Rosin Solvent. Removal of M-Flux SS requires two steps: liberal applications of M-Prep Conditioner A, which must be blotted dry; and then M-Prep Neutralizer 5A, also to be blotted dry.

FLUX AND ROSIN SOLVENT KITS (See Note 1)	
M-Flux FAR-2 Kit, 2 Year Shelf Life	Two 1-oz (30-ml) brush-cap bottles M-Flux AR-2 Two 1-oz (30-ml) brush-cap bottles <i>M-LINE</i> Rosin Solvent
M-Flux AR-2 Bulk, 2 Year Shelf Life	Twelve 1-oz (30-ml) brush-cap bottles M-Flux AR-2
RSK-1 <i>M-LINE</i> Rosin Solvent Kit, 2 Year Shelf Life	Twelve 1-oz (30-ml) brush-cap bottles
RSK-2 <i>M-LINE</i> Rosin Solvent Bulk, 2 Year Shelf Life	1-qt (960-ml) bottles
RSK-4 <i>M-LINE</i> Rosin Solvent Kit, 2 Year Shelf Life	Four 1-oz (30-ml) brush-cap bottles
FSS-1 M-Flux SS Kit, 1 Year Shelf Life	One 1-oz (30-ml) applicator cap bottle M-Flux SS One 1-oz (30-ml) brush-cap bottle M-Prep Conditioner A One 1-oz (30-ml) brush-cap bottle M-Prep Neutralizer 5A

Note 1: All products shown are RoHS compliant.

SOLDERING UNIT

MARK X SOLDERING STATION	
	<p>The Mark X is ideally suited for strain gage applications with its digitally controlled temperature range from 120 to 900 deg F (49 to 482 deg C). This unit incorporates a closed loop temperature control that provides excellent stability of 1.8 deg F (1 deg C) when used from 400 to 900 def F (204 to 482 deg C). High performance unit with replaceable ceramic heating element and comfortable cushioned handle at an affordable price. Three solder tips are supplied with this unit including 0.8, 1.2, and 1.6 mm (installed). In order to determine the appropriate tip, compare the tip size with the strain gage tab size and construction. Additional tips can be ordered separately.</p> <p>M10S-1-115 SOLDERING STATION M10S-1-230 SOLDERING STATION M10S-A WIDE TIP (1.2 MM) M10S-B NARROW TIP (0.8 MM)</p>

REFERENCES

- Application Note TT-609, "Strain Gage Soldering Techniques."
- Application Note TT-606, "Soldering Techniques for Lead Attachment to Strain Gages with Solder Dots."
- Application Note TT-602, "Silver Soldering Technique for Attachment of Leads to Strain Gages."

Solders, Fluxes, Kits, and Soldering Unit

SOLDERING UNIT

RESISTANCE SOLDERING UNIT



Used in combination with 1240-FPA silver-solder paste, this unit makes an excellent lead attachment system for strain gage operation above +500°F (+260°C). The variable power control allows adjustment from zero to 100 watts and zero to 3 Vac. The power control is fused, and a pilot light is incorporated. The foot switch and tweezer soldering handpiece give excellent operator control over each solder joint. Includes power unit and foot switch, both with three-wire NEMA plugs, tweezer soldering handpiece, and replacement electrodes.

WRS-1 Resistance Soldering Unit, 110 Vac

WRS-2 Resistance Soldering Unit, 220 Vac (not CE rated)

WRS-A Replacement Electrodes, package of 6

Wire, Cable and Accessories

CONTENTS

General Information and Selection.....	58
Single-Conductor Wire	
134-AWP	59
136-AWP	59
127-AWN	59
130-AWN	59
134-AWN	59
136-AWN	59
127-AWQ	59
130-AWQ	59
134-AWQ	59
126-GWF	59
137-HWN	59
142-JWN	59
126-DWV	59
126-FWK	59
130-FWT	59
Three-Conductor Cable	
322-DJV	60
326-DFV	60
330-DFV	60
326-BSV	60
326-DTV	60
326-DSV	60
330-FFE	60
330-FJT	60
336-FTE	60
326-FTE	60
330-FTE	60
326-GJF	60
Four-Conductor Cable	
426-DFV	61
430-DFV	61
422-DSV	61
424-DSV	61
426-BSV	61
426-DTV	61
430-FST	61
426-FTE	61
436-FTT	61
426-FFT	61
Flat-Ribbon Lead (Uninsulated)	
1-GL-64-001	61
1-KL-16-002	61
1-KL-08-003	61
1-KL-08-005	61
Accessories	
HST-1	62
WTS-1	62
WTS-2	62
WTS-A	62

General Information and Selection

Different strain gage installation conditions and test specifications often necessitate the use of different types or sizes of leadwires. For accurate, reliable strain measurements, it is important to use an appropriate type of leadwire for each installation. Micro-Measurements stocks a wide variety of wires and cables, cataloged in tabular form on the following pages. All wires and cables listed in the tables have been proven in the field to give excellent sensor performance when properly used in the specified environments. Special gage wiring problems may require the use of wires not listed here. In such cases, our Applications Engineering Department can recommend appropriate wire types and can suggest suppliers.



WIRE AND CABLE CODING SYSTEM

3 26 — D F V

Number of Conductors ———— 3

AWG (American Wire Gauge) Wire Size ———— 26

Types of Wire

A: Solid copper
B: Stranded copper
D: Tinned stranded copper
F: Silver-plated stranded
G: Nickel-clad solid copper
H: Solid Manganin
J: Solid Balco®

Construction

F: Flat cable
J: Twisted cable with jacket
S: Shielded/twisted with jacket
T: Twisted cable without jacket
W: Round single wire

Insulation

E: Etched TFE Teflon®
F: Fiberglass braid
K: Kapton® (polyimide) wrap
N: Nylon/polyurethane enamel
P: Polyurethane enamel
Q: Polyimide enamel
T: TFE Teflon®
V: Vinyl (PVC)

AWG	Diameter (nominal)		AWG	Diameter (nominal)	
	in	(mm)		in	(mm)
22	0.0253	0.643	34	0.0063	0.160
26	0.0159	0.404	36	0.0050	0.127
27	0.0142	0.361	37	0.0045	0.114
30	0.0100	0.254	42	0.0025	0.064

Balco is a Registered Trademark of W.B. Driver Company.
 Teflon and Kapton are Registered Trademarks of DuPont.

*Solid core wire

RIBBON WIRE CODING SYSTEM

1 G L 64 001

Number of Conductors ———— 1

Alloy ———— G

Thickness, in mils ———— 64

Width ———— 001

G: NiClad copper
K: Nichrome V

L: Uninsulated ribbon

64: 1/64 in (0.4 mm)
16: 1/16 in (1.6 mm)
08: 1/8 in (3.2 mm)

The Wire and Cable Coding System shown above gives the unique designation of each wire type for ordering purposes. The leadwire and cabling selection charts presented on the next three pages are organized

according to the number of conductors. All wires and cables are supplied on spools for user convenience. Some styles may not be continuous length.

References:

- Application Note: TT-601, Techniques for Bonding Leadwires to Surfaces Experiencing High Centrifugal Forces.
- Application Note: TT-604, Leadwire Attachment Techniques for Obtaining Maximum Fatigue Life of Strain Gages.
- Application Note: TT-608, Techniques for Attaching Leadwires to Unbonded Strain Gages.








General Information and Selection

		SINGLE-CONDUCTOR TYPES: SOLID WIRE		
		Type	Packaging Foot (Meter)*	Description
<p>AWP AWN</p> <p>AWQ GWF</p> <p>HWN JWN</p>	134-AWP 136-AWP	500 ft (150 m) 500 ft (150 m)	Solid copper wire, polyurethane enamel: General-purpose intragage hookup wire. Useful from -100° to +300°F (-75° to +150°C). Enamel coating easily removed by applying heat from soldering iron.	<p>RoHS COMPLIANT</p>
	127-AWN 130-AWN 134-AWN 136-AWN	500 ft (150 m) 500 ft (150 m) 500 ft (150 m) 500 ft (150 m)	Solid copper wire, nylon/polyurethane enamel: Identical in use and specifications to Type AWP above, but with superior abrasion resistance and slightly reduced insulation resistance at elevated temperatures. 134-AWN and 136-AWN are available in four colors; specify: -R (red), -W (white), -B (black), -G (green).	
	127-AWQ 130-AWQ 134-AWQ	500 ft (150 m) 500 ft (150 m) 500 ft (150 m)	Solid copper wire, polyimide enamel: Intragage hookup wire. Temperature range -452° to +600°F (-269° to +315°C) short term. Enamel is extremely tough and abrasion resistant, with excellent electrical properties; generally removed by mechanical scraping or sanding.	
	126-GWF 126-GWF	100 ft (30 m) 1000 ft (300 m)	Solid nickel-clad copper wire, fiberglass braid insulation: Useful from -452° to +900°F (-269° to +480°C). Recommended for use with WK-Series gages when silver solder is used for lead attachment.	
	137-HWN	200 ft (60 m)	Solid manganin wire, nylon/polyurethane enamel: Used for bridge balance and span set in transducer circuits. Nominal resistance: 14 ohms/ft (50 ohms/m). Temperature range: +10° to +125°F (-10° to +50°C).	
	142-JWN	500 ft (150 m)	Solid Balco® wire, nylon/polyurethane enamel: Used for bridge temperature compensation of zero shift or span. Nominal resistance: 19 ohms/ft (65 ohms/m). Temperature coefficient of resistance: +0.25%/°F (+0.45%/°C). Temperature range: +10° to +300°F (-10° to +150°C).	
		SINGLE-CONDUCTOR TYPES: STRANDED WIRE		
		Type	Packaging Foot (Meter)*	Description
<p>DWV FWK FWT</p>	126-DWV	100 ft (30 m)	Stranded tinned-copper wire, vinyl insulation: General-purpose leadwire. Useful to +180°F (+80°C). Vinyl insulation becomes brittle at low temperature; not normally used below -60°F (-50°C). Specify red, white, black, or green.	<p>RoHS COMPLIANT</p>
	126-FWK	25 ft (7.5 m)	Stranded silver-plated copper wire, Kapton® polyimide insulation: High- performance. Recommended for unusually severe service from -452° to over +600°F (-269° to +315°C) short term. Excellent resistance to abrasion, radiation, and outgassing in high vacuum. Treated for bondability.	
	130-FWT	100 ft (30 m)	Stranded silver-plated copper wire, Teflon® insulation: Wide temperature range. Useful from -452° to +500°F (-269° to +260°C). When bonding to Teflon-insulated wire, insulation must be treated with Tetra-Etch® compound (see "Special-Purpose Materials.") Specify red, white, black, or green.	

*Some types may not be continuous length.

Balco is a Registered Trademark of W.B. Driver Company.
 Kapton and Teflon are Registered Trademarks of DuPont.
 TetraEtch is a Registered Trademark of W.L. Gore.









General Information and Selection

		THREE-CONDUCTOR CABLE		Description	
		Type	Packaging Foot (Meter)*		
 <p>DJV DFV</p>	322-DJV	500 ft (150 m)	Stranded tinned-copper wire, 3-conductor twisted cable, chrome PVC vinyl jacket, vinyl insulation: Good choice for use with EGP-Series Embedment Strain Gages. Color-coded red/white/black.	 <p>Pb-free RoHS COMPLIANT</p>	
	326-DFV 326-DFV 330-DFV 330-DFV	100 ft (30 m) 1000 ft (300 m) 100 ft (30 m) 1000 ft (300 m)	Stranded tinned-copper wire, 3-conductor flat cable, vinyl insulation: Convenient general-purpose cable. For use from -60° to +180°F (-50° to +80°C). Flat construction requires minimum space. Color-coded red/white/black.		
	326-BSV 326-BSV	100 ft (30 m) 1000 ft (300 m)	Stranded copper wire, 3-conductor twisted cable, PVC insulated, braided shield: For use from -60° to 180°F (-50° to +80°C).		
	326-DTV 326-DTV	100 ft (30 m) 1000 ft (300 m)	Stranded tinned-copper wire, 3-conductor twisted cable, vinyl insulation: Convenient general-purpose cable for low electrical noise pickup. For use from -60° to +180°F (-50° to +80°C). Color-coded red/white/black.		
	326-DSV 326-DSV	100 ft (30 m) 1000 ft (300 m)	Stranded tinned-copper wire, 3-conductor twisted cable, vinyl insulation, braided shield, vinyl jacket: Special-purpose cable to minimize electrical noise interference. Useful from -60° to +180°F (-50° to +80°C). Color-coded red/white/black.		
 <p>BSV DTV DSV</p>					
 <p>FFE</p>	330-FFE 330-FFE	100 ft (30 m) 1000 ft (300 m)	Stranded silver-plated copper wire, 3-conductor flat cable, etched Teflon® insulation: For use from -452°F to +500°F (-269°C to +260°C). Color-coded red/white/black. Insulation treated for bonding.	 <p>Pb-free RoHS COMPLIANT</p>	
 <p>FJT FTE GJF</p>	330-FJT 330-FJT	100 ft (30 m) 1000 ft (300 m)	Stranded silver-plated copper wire, 3-conductor twisted cable, Teflon insulation, Teflon jacket: Small, flexible. For use from -452° to +392°F (-269° to +200°C). Color-coded red/white/black. When bonding Teflon-insulated wire, insulation must be treated with Tetra-Etch® compound (see "Special-Purpose Materials.")	 <p>Pb-free RoHS COMPLIANT</p>	
	336-FTE	50 ft (15 m)	Stranded silver-plated copper wire, 3-conductor twisted cable, etched Teflon insulation: Small, flexible cable. For use from -452° to +500°F (-269° to +260°C). Color-coded red/white/black. Insulation treated for bonding.		
	326-FTE 326-FTE 330-FTE 330-FTE	100 ft (30 m) 500 ft (150 m) 100 ft (30 m) 500 ft (150 m)	Stranded silver-plated copper wire, 3-conductor twisted cable, etched Teflon insulation: For use from -452° to +500°F (-269° to +260°C). Color-coded red/white/black. Insulation treated for bonding.		
	326-GJF 326-GJF	100 ft (30 m) 1000 ft (300 m)	Solid nickel-clad copper wire, 3-conductor twisted cable, fiberglass braid insulation and jacket: For use from -452° to +900°F (-269° to +480°C). Recommended for use with WK-Series gages when silver solder is used for lead attachment. Color-coded red/white/black.		

*Some types may not be continuous length.

Teflon is a Registered Trademark of DuPont.
TetraEtch is a Registered Trademark of W.L. Gore.

General Information and Selection

FOUR-CONDUCTOR CABLE			
	Type	Packaging	Description
		Foot (Meter)*	
 BSV	426-BSV	100 ft (30 m)	Stranded copper wire, 4-conductor twisted cable, PVC insulated braided shield: For use from -60° to +180°F (-50°C to +80°C).
	426-BSV	1000 ft (300 m)	
 DFV	426-DFV	100 ft (30 m)	Stranded tinned-copper wire, 4-conductor flat cable, vinyl insulation: For use from -60° to +180°F (-50° to +80°C). Conductors easily separated for stripping and wiring. Color-coded red/white/black/green.
	426-DFV	1000 ft (300 m)	
	430-DFV	100 ft (30 m)	
	430-DFV	1000 ft (300 m)	
 DSV	422-DSV	100 ft (30 m)	Stranded tinned-copper wire, 4-conductor polypropylene insulated: Twisted shielded pairs (red/black and white/green) with a drain wire, PVC jacket. For use from -60° to +180°F (-50°C to +80°C).
	422-DSV	1000 ft (300 m)	
	424-DSV	100 ft (30 m)	
	424-DSV	1000 ft (300 m)	
 DTV	426-DTV	100 ft (30 m)	Stranded tinned-copper wire, 4-conductor twisted cable, vinyl insulation: For use from -60° to +180°F (-50° to +80°C). Color-coded red/white/black/green.
	426-DTV	1000 ft (300 m)	
 FST	430-FST	100 ft (30 m)	Stranded silver-plated copper wire, 4-conductor twisted cable, Teflon® insulation, braided shield, Teflon jacket: Small, flexible cable. For use from -452° to +500°F (-269° to +260°C). Color-coded red/white/black/green. When bonding Teflon-insulated wire, insulation must be treated with Tetra-Etch® compound (see Special-Purpose Materials, document number 11008).
	430-FST	1000 ft (300 m)	
 FTE/FTT	426-FTE	100 ft (30 m)	Stranded silver-plated copper wire, 4-conductor twisted cable, etched Teflon insulation: For use from -452° to +500°F (-269° to +260°C). Color-coded red/white/black/green. Insulation treated for bonding.
	426-FTE	500 ft (150 m)	
 FFT	436-FFT	100 ft (30 m)	Stranded silver-plated copper wire, 4-conductor twisted cable, Teflon® insulation: Small, flexible cable. For use from -452° to +500°F (-269° to +260°C). Color coded red, white, black, green. When bonding Teflon insulated wire, insulation must be treated with Teflon etchant, such as TEC-1 (see Special-Purpose Materials, document number 11008).
	436-FFT	500 ft (150 m)	
	426-FFT	100 ft (30 m)	Stranded silver-plated copper wire, 4-conductor flat cable, Teflon® insulation: For use from -452° to +500°F (-269° to +260°C). Color coded red, white, black, green. When bonding Teflon insulated wire, insulation must be treated with a Teflon etchant, such as TEC-1 (see Special-Purpose Materials, document number 11008).
	426-FFT	500 ft (150 m)	
FLAT RIBBON LEAD (UNINSULATED)			
	Type	Packaging	Description
		Foot (Meter)*	
	1-GL-64-001	50 ft (15 m)	Uninsulated flat ni-clad copper ribbon: 1/64 in wide x 0.001 in thick (0.4 x 0.025 mm). For use from -452 to 900°F (-269 to +480°C). Can be easily soldered or spot welded.
	1-KL-16-002	50 ft (15 m)	Uninsulated Nichrome V: 1/16 in wide x 0.002 in thick (1.6 x 0.05 mm). For use from -452 to +2000°F (-269 to +1100°C).
	1-KL-08-003	50 ft (15 m)	Uninsulated Nichrome V: 1/8 in wide x 0.003 in thick (3.2 x 0.08 mm). For use from -452 to +2000°F (-269 to +1100°C).
	1-KL-08-005	50 ft (15 m)	Uninsulated Nichrome V: 1/8 in wide x 0.005 in thick (3.2 x 0.127 mm). For use from -452 to +2000°F (-269 to +1100°C).



RoHS
COMPLIANT



RoHS
COMPLIANT

*Some types may not be continuous length.

Teflon is a Registered Trademark of DuPont.
TetraEtch is a Registered Trademark of W.L. Gore.

General Information and Selection

HST-1 HEAT-SHRINKABLE WIRE SPLICE SEALANT



Fast, easy-to-use method for protecting wire splice connections. Constructed of irradiated polyolefin plastic tubing with a heat-flowable inner liner sealant. Forms an immediate and tight seal to splice connection at a shrink temperature of +275°F (+135°C). Inside diameter before heating is 0.125 in (3.2 mm); after heating, 0.023 in (0.6 mm). Large range of shrinkage allows use with leadwire insulation diameters from 0.03 to 0.11 in (0.75 to 2.8 mm). The operating temperature range is -65° to +230°F (-55° to +110°C). Package of eight 6-in (150-mm) lengths.

THERMAL WIRE STRIPPER



The ease and simplicity of operation of the Thermal Wire Stripper make it ideal for most strain gage leadwire stripping. The variable heat control allows stripping of all thermoplastic insulations, including Teflon®, in sizes No. 18 to No. 36 AWG (1 to 0.1 mm diameter). The foot switch and tweezer hand-piece give excellent operator control over the stripping operation. Includes power unit and foot switch, both with 3-wire NEMA plugs, and tweezer handpiece.

WTS-1: 110 Vac

WTS-2: 220 Vac (not CE rated)

WTS-A Replacement Elements: Set of two.

Teflon is a Registered Trademark of DuPont.

Protective Coatings


CONTENTS

General Information	64
M-Coat A.....	66
M-Coat B.....	67
M-Coat C.....	68
M-Coat D.....	69
M-Coat F	70
M-Coat FBT.....	71
M-Coat JA	72
M-Coat W-1	73
3140 RTV.....	74
3145 RTV.....	75
M-Bond AE-10	76
M-Bond AE-15	76
M-Bond 43-B	77
M-Bond GA-61.....	78
Barrier E.....	79
Barrier WD	80
Gagekote #5.....	81
Gagekote #8.....	82
Gagekote #11.....	83


General Information



M-Coat A—General-purpose “transparent” polyurethane.

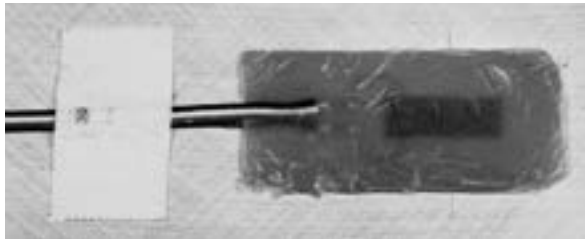

M-Coat W-1—Microcrystalline wax.

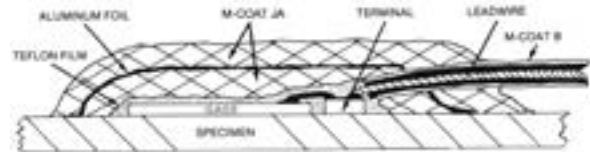

Cross-sectional view of typical long-term installation.



Recommended protective coating system for gage installations that must operate submerged in water for long periods of time.

Strain gage performance is easily degraded by the effects of moisture, chemical attack, or mechanical damage. As a result, gages require varying degrees of protection according to the severity of the environment in which they must operate. While it is often practical to operate fully encapsulated gages without additional protection, in laboratory applications, open-faced gages should always be covered with a suitable coating as soon as possible after installation.

The coating compounds described on the following pages have been formulated specifically for use in protecting strain gage installations from damaging environmental conditions. The range of materials is adequate for handling the majority of gage protection requirements. In an air-conditioned laboratory, for instance, a single layer of M-Coat A would ordinarily provide sufficient protection against moisture, fingerprints, and other contaminants. When the gage installation must operate in a more severe environment, alternate coatings or combinations of coatings can be employed as illustrated above.

To serve as a preliminary guide for coating selection, the chart on the next page gives recommended coating systems for a variety of typical environments. The effectiveness of these materials and procedures has been experimentally validated on numerous occasions. However, application technique is also an important factor in the performance of any gage protection system. It is therefore good practice, particularly in the case of long-term installations, to verify by test that the system performs as required.

Teflon is a Registered Trademark of DuPont.
Tetra-Etch is a Registered Trademark of W.L. Gore.

APPLICATION NOTES FOR PROTECTIVE COATINGS

1. For long-term tests, or in particularly hostile environments, carefully clean the surface before applying any protective coating. Coating extending into uncleaned areas will eventually loosen.
2. When several layers of coating are required, extend each overcoat beyond the previous layer.
3. Incomplete protection around leadwires is a common cause of moisture penetration into gage installations. (Many commercial leadwire insulations contain pinholes.)
4. Seal wire splices with HST-1 Heat Shrinkable Tubing.
5. Before applying any protective coating to an unprotected installation that has been exposed to high humidity, dry the installation thoroughly.
6. If the coating is a room-temperature-curing type, the moisture absorption rate can be decreased by postcuring at an elevated temperature.
7. Generally, a thick coating offers a more resistant path to moisture absorption than a thin one.
8. For a further vapor barrier, apply an intermediate layer of metal foil (aluminum, such as M-Coat FA-2, or stainless steel), or TFE Teflon® film (first treated with TEC-1 Tetra-Etch® compound for optimum bond). Since moisture can only penetrate around the edges of the foil or film, the path to the gage is much longer.
9. To evaluate protective coatings for long-term testing, monitor the zero-shift of the gage. Resistance-to-ground measurements can also indicate deterioration.

General Information

PLANNING FOR RELIABLE STRAIN GAGE INSTALLATIONS		
ENVIRONMENT	PREFERRED	ALTERNATE
TYPICAL LABORATORY		
50%, or lower, relative humidity	M-Coat A	M-Coat C, or M-Coat D, or M-Coat F
FIELD APPLICATIONS		
Outdoor installations, shielded from rain and snow	M-Coat F	M-Coat JA
HIGH HUMIDITY, WATER SPLASH		
Laboratory and field applications under damp or wet conditions	Short Term: 3140 RTV Long Term: M-Coat W-1 Wax	Short Term: 3145 RTV Long Term: M-Coat F
WATER IMMERSION		
Short-term, fresh water or salt water	Teflon® + M-Coat B (on vinyl-insulated leadwires) + M-Coat JA	M-Coat W-1 Wax
Long-term, fresh water	Per diagram and photo on previous page	M-Coat W-1 Wax, or M-Coat F
Long-term, salt water	Per diagram and photo on previous page + metal cap and conduit for leadwires	None
High-pressure water	Per diagram and photo on previous page	M-Coat F, or M-Coat W-1 Wax for short-term
STEAM		
+212°F (+100°C), long-term installation	Hermetically sealed metal cap, and conduit for leadwires	None
CONCRETE SURFACES		
Long-term	Per diagram and photo on previous page, preceded by M-Bond AE-10	M-Bond GA-61 to seal concrete surface
OILS AND GASOLINE		
Commercial oils, to +180°F (+80°C), gasoline, and kerosene	M-Coat D + two or three layers of M-Coat B	3145 RTV + M-Coat B
Synthetic oils, to +200°F (+95°C)	Two or three layers of M-Bond 43B	M-Bond GA-61
HIGH-TEMPERATURE AIR		
To +500°F (+260°C), with good mechanical protection	Short Term: M-Bond GA-61	3145 RTV

Protective Coating

FEATURES

- Easy to use
- Transparent
- Good general-purpose coating for laboratory use

DESCRIPTION

Air-drying solvent-thinned (xylene) polyurethane. Transparent. Moderate hardness; good flexibility. Can be removed with *M-LINE* Rosin Solvent or toluene. Film thickness 0.005–0.01 in (0.1–0.25 mm) per coat.

General-purpose coating for lab use, and as base coating for field applications. Must be fully cured before addition of other coatings. Fair moisture resistance. Not readily attacked by many solvents. Convenient to use.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	<p>Dries tack-free at room temperature in 20 minutes. Completely dry in 2 hours.</p> <p>Normal cure 24 hours at room temperature. Chemical resistance and coating hardness increase for 6 to 7 days.</p>
OPERATING TEMPERATURE RANGE	<p>Short Term: –100° to +300°F (–75° to +150°C).</p> <p>Long Term: –100° to +250°F (–75° to +120°C).</p>
SHELF LIFE	<p>Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.</p>

PACKAGING OPTIONS	
KIT	BULK
4 brush-cap bottles [1 oz (30 ml) ea].	Quart container.

Protective Coating

FEATURES

- Good resistance to chemicals
- Air drying
- Also used for priming leadwires

DESCRIPTION

Air-drying solvent-thinned (MEK) nitrile rubber. Forms flexible rubbery coating. Do not use directly on exposed foil or bare leads. Often used to prime vinyl-insulated wire to improve bondability to other coatings. If used as primer on leads, thin 50:50 with MEK. Flexible at cryogenic temperatures. Excellent resistance to gasoline, kerosene, commercial oils. Electrical properties poorer than other M-Coats, particularly at elevated temperatures.



CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	<p>Air-dries in 1 hour at +75°F (+24°C). Do not apply subsequent protective coatings for at least 2 hours from time of application. Normal cure 24 hours at room temperature.</p> <p>Further improve chemical resistance with 1 hour bake at +200°F (+95°C).</p>
OPERATING TEMPERATURE RANGE	<p>Short Term: -320° to +300°F (-195° to +150°C).</p> <p>Long Term: -320° to +200°F (-195° to +95°C).</p>
SHELF LIFE	<p>Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.</p>

PACKAGING OPTIONS	
KIT	BULK
4 brush-cap bottles [1 oz (30 ml) ea].	Quart container.

Protective Coating

FEATURES

- Air drying
- Low reinforcement
- Transparent

DESCRIPTION

Solvent-thinned (naphtha) RTV silicone rubber. Cures to tough, rubbery transparent film. Good all-around mechanical and electrical properties. Completely noncorrosive. Film thickness 0.015–0.02 in (0.4–0.5 mm) per coat.

Recommended for lab and field installations that require a high degree of protection in thin coatings. Good water-splash protection. Good chemical resistance.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	<p>Solvents evaporate in about 60 minutes at room temperature. Allow 20 minutes drying time between coats.</p> <p>Cures in 24 hours at +75°F (+24°C) and 50% RH. Longer cure at lower humidity.</p>
OPERATING TEMPERATURE RANGE	<p>Short Term: –75° to +550°F (–60° to +290°C).</p> <p>Long Term: –75° to +500°F (–60° to +260°C).</p>
SHELF LIFE	<p>Minimum 9 months at +75°F (+24°C) kept tightly sealed. Refer to product label for most recent information.</p>

PACKAGING OPTIONS	
KIT	BULK
4 brush-cap bottles [1 oz (30 ml) ea].	Quart container.

Protective Coating

FEATURES

- Air drying
- Opaque
- Good base coating

DESCRIPTION

Air-drying solvent-thinned (toluene) acrylic. Dense white color for easy visual inspection of coverage. Forms hard thin coating capable of high elongation. Can be removed with *M-LINE* Rosin Solvent or toluene. Apply in thin coats to prevent solvent entrapment. Film thickness 0.005–0.01 in (0.1–0.25 mm) per coat.

Good general laboratory moisture barrier. Electrical leakage negligible even when uncured. Good base coating for subsequent applications of M-Coat B. Convenient for anchoring and insulating intrabridge wiring and jumper leads. Chemical resistance only fair but can be improved by postcure at +175°F (+80°C) for 30 minutes.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	<p>Air dry for 15 minutes then cure for 24 hours at +75°F (+24°C) or one hour at +150°F (+65°C).</p> <p>Overcoats can be applied 30 minutes from time of application.</p> <p>Coating binder begins to sublimate at +280°F (+140°C), but residue is inorganic and will not become conductive.</p>
OPERATING TEMPERATURE RANGE	<p>Short Term: –100° to +325°F (–75° to +160°C).</p> <p>Long Term: –100° to +250°F (–75° to +120°C).</p>
SHELF LIFE	<p>Minimum 1 year at +75°F (+24°C) kept tightly sealed. Refer to product label for most recent information.</p>

PACKAGING OPTIONS	
KIT	BULK
4 brush-cap bottles [1 oz (30 ml) ea].	Quart container.

Protective Coating

FEATURES

- Excellent for outdoor applications
- No cure required
- Versatile

DESCRIPTION

Kit of selected materials easily applied in various combinations. Provides environmental and mechanical protection. Particularly well-suited to field applications where conditions are not ideal. Typical applications include pipelines, tunnels, bridges, reinforcement bars in concrete structures, heavy machinery, ships, aircraft, motor vehicles, and pressure vessels.



CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	No mixing or curing required.
OPERATING TEMPERATURE RANGE	<p>Short Term: -70° to +250°F (-55° to +120°C).</p> <p>Long Term: -20° to +175°F (-30° to +80°C).</p>
SHELF LIFE	<p>Minimum 1 year at +75°F (+24°C).</p> <p>Refer to product label for most recent information.</p>

PACKAGING OPTIONS	
KIT	BULK
<p>12 pieces [4-1/2 in x 3-3/4 in x 1/8 in ±1/32 in (115 x 95 x 3.2 mm ±0.8 mm)] each:</p> <ul style="list-style-type: none"> • M-Coat FB Butyl Rubber Sealant • M-Coat FN Neoprene Rubber Sheets <p>1 roll [0.003 in x 2 in x 20 ft (0.08 mm x 50 mm x 6 m)] M-Coat FA Aluminum Foil Tape</p> <p>2 brush-cap bottles [1/2 oz (15 ml) ea] M-Coat B Air-Drying Nitrile Rubber Coating</p> <p>M-Coat FT Teflon® Tape</p>	<p>25 pieces M-Coat FB-2 Butyl Rubber Sealant</p> <p>25 pieces M-Coat FN-2 Neoprene Rubber Sheets</p> <p>1 roll [20 ft (6 m)] M-Coat FA-2 Aluminum Foil Tape</p> <p>4 brush-cap bottles [1 oz (30 ml) ea] M-Coat B Air-Drying Nitrile Rubber Coating</p> <p>10 pieces [1 x 20 x 0.003 in (25 x 500 x 0.08 mm) ea] M-Coat FT Teflon® Tape</p>

Teflon is a Registered Trademark of DuPont.

Protective Coating

FEATURES

- Excellent protection from moisture
- Low reinforcement
- Easy to apply



RoHS
COMPLIANT



DESCRIPTION

Solvent-thinned butyl rubber designed to provide excellent moisture protection with low reinforcement effects. Principally used in transducers. Exhibits a paste-like consistency and is normally applied with a spatula. Thickness over 0.1 in (2.5 mm) not recommended.

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Air dry 8 hours, followed by an elevated temperature cure of +150° to +175°F (+65° to +80°C) for 4 to 6 hours.
OPERATING TEMPERATURE RANGE	0° to +175°F (-20° to +80°C).
SHELF LIFE	Minimum 12 months at +75°F (+24°C). Refer to product label for most recent information.

PACKAGING OPTIONS	
KIT	BULK
75g collapsible tubes, 4 each	Quart container.

Protective Coating

FEATURES

- Excellent resistance to moisture
- Good resistance to chemicals
- Good protection against mechanical damage
- Room-temperature cure

DESCRIPTION

Two-part polysulfide liquid polymer compound. Can be applied in coating thickness of 1/8 in (3 mm) without flowing on vertical surfaces. Tough, flexible coating. No weighing required. Uncured coating can be removed with CSM Degreaser, Rosin Solvent, or MEK.

General-purpose coating. Good protection against oil, grease, most acids and alkalis, and most solvents. Strong solvents may cause swelling and softening with time. Concentrated acids eventually break down coating. Good salt-water immersion coating.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Mixed pot life 120 minutes at +77°F (+25°C). Normal cure in 24 hours at +77°F (+25°C).
OPERATING TEMPERATURE RANGE	Short Term: -65°F to +360°F (-54°C to +182°C°). Long Term: -65°F to +250°F (-54°C to +121°C°).
SHELF LIFE	5 months minimum when stored between +40° to +80°F in original unopened containers. Refer to product label for most recent information.

PACKAGING OPTIONS	
M-COAT JA-1 KIT	M-COAT JA-3 KIT
1 mixing dispenser [2 fl oz (59 ml)] 1 piece M-Coat FT Teflon® Tape, 1 x 20 x 0.003 in (25 x 500 x 0.08 mm).	3 mixing dispensers [2 fl oz (59 ml) ea] 3 pieces M-Coat FT Teflon® Tape, 1 x 20 x 0.003 in (25 x 500 x 0.08 mm) ea.

Protective Coating

FEATURES

- Outstanding moisture protection
- Easy to apply
- No cure required

DESCRIPTION

Microcrystalline wax. Has very low water-vapor transmission rate. Attacked by most solvents. Coating thickness 0.015–0.06 in (0.4–1.5 mm).

Excellent water-immersion coating. Poor mechanical protection. Often used as an intermediate coating.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
APPLICATION REQUIREMENTS	Heat to at least +170°F (+75°C) to melt. For best wetting and sealing, heat specimen surface to at least +100°F (+45°C) before applying. No cure required.
OPERATING TEMPERATURE RANGE	0° to +150°F (–20° to +65°C)
SHELF LIFE	No limit. Store at +75°F (+24°C).

PACKAGING OPTIONS	
PARAMETER	DETAILS
KIT	5 tins [1 oz (28g)]
BULK	1 package [5 lb (2.25 kg)]

Protective Coating

FEATURES

- Easy to use
- Translucent
- Self-leveling
- Room-temperature cure



DESCRIPTION

Single-component 98%-solids RTV silicone rubber. Room-temperature cure (humidity-reactive). Completely non-corrosive. Forms tough, rubbery coating. Excellent properties. Translucent; permits full inspection of installation. Self-leveling; forms fairly thick coats 0.03–0.06 in (0.75–1.5 mm).

Easy-to-apply general-purpose coating. Lab and field use. Low reinforcing effects. High-elongation capabilities. Good for short-term water immersion. Resists many chemicals. Bonds to contaminated surfaces for short-term tests; for best long-term protection, chemically clean surface and prime with *M-LINE* RTV Primer No. 1.

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Tack-free in approximately 2 hours. Cure 24 hours at +75°F (+24°C), 50% RH for each 0.02-in (0.5-mm) thickness. Longer cure at lower humidity levels. Note: Will not cure properly if coating is not exposed to atmosphere.
OPERATING TEMPERATURE RANGE	–49°F to +392°F (–45°C to +200°C).
SHELF LIFE	Minimum 6 months at +75°F (+24°C). Refer to product label for most recent information..

PACKAGING OPTIONS	
KIT	OPTIONAL PRIMER
1 collapsible metal tube [3 oz (85g)]	4 brush-cap bottles [1 oz (30 ml) ea] RTV Primer No. 1

Protective Coating

FEATURES

- Easy to use
- Good mechanical protection
- Good cable anchor
- Room-temperature cure

DESCRIPTION

Single-component 98%-solids RTV silicone rubber. Room temperature cure (humidity-reactive). Completely non-corrosive. Forms tough, rubbery coating. Excellent properties. Opaque gray coating of higher strength and toughness than 3140 RTV. Not self-leveling.

Easy-to-apply general-purpose coating. Lab and field use. Low reinforcing effects. High-elongation capabilities. Good for short-term water immersion. Resists many chemicals. Bonds to contaminated surfaces for short-



RoHS
COMPLIANT

term tests; for best long-term protection, chemically clean surface and prime with *M-LINE* RTV Primer No. 1. Very thick coatings can be applied without sag or runoff. Tear strength much higher than 3140. Good cable anchor.

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Tack-free in approximately 2 hours. Cure 24 hours at +75°F (+24°C), 50% RH for each 0.02-in (0.5-mm) thickness. Longer cure at lower humidity levels. Note: Will not cure properly if coating is not exposed to atmosphere.
OPERATING TEMPERATURE RANGE	-49°F to +392°F (-45°C to +200°C).
SHELF LIFE	Minimum 6 months at +75°F (+24°C). Refer to product label for most recent information.

PACKAGING OPTIONS	
KIT	OPTIONAL PRIMER
1 collapsible metal tube [3 oz (85g)]	4 brush-cap bottles [1 oz (30 ml) ea] RTV Primer No. 1

Protective Coating

FEATURES

- Thin, hard coating
- Good electrical and mechanical protection
- Good leadwire anchor
- Also used as an adhesive

DESCRIPTION

Two-component 100%-solids epoxy systems. Primarily used as an adhesive. Often used as protective coatings because of low vapor-transmission rate. AE-15 is superior but requires heat cure. Single coating thickness 0.005-0.015 in (0.1–0.4 mm).

Primarily used where a thin hard coating is required to resist water immersion for short time. Good electrical/mechanical protection where high velocity fluids are present and minimum disturbance to flow is necessary. Good leadwire anchor. Often used as precoat for sealing concrete.



M-Bond AE-10

M-Bond AE-15

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	<p>AE-10: Minimum cure 6 hours at +75°F (+24°C).</p> <p>AE-15: 6 hours at +125°F (+50°C).</p> <p>To accelerate cure at higher temperatures, see cure schedules for M-Bond AE-10 and M-Bond AE-15.</p>
POT LIFE	<p>AE-10: Mixed pot life 15-20 minutes.</p> <p>AE-15: 1-1/2 hours at +75°F (+24°C).</p>
OPERATING TEMPERATURE RANGE	-100° to +200°F (-75° to +95°C)
SHELF LIFE	Minimum 12 months at +75°F (+24°C); or 18 months at +40°F (+5°C). Refer to product label for most recent information.

PACKAGING	
KIT	BULK
6 mixing jars AE Resin (10 g ea) 1 bottle Curing Agent 10 or 15 [1/2 oz (15 ml)]	1 bottle AE Resin (200 g) 1 bottle Curing Agent 10 (40 g) or 1 bottle Curing Agent 15 (25 g)

Protective Coating

FEATURES

- Excellent chemical, electrical and mechanical properties
- Thin, hard coating
- Excellent in transducer service
- Also used as an adhesive
- Elevated-temperature cure

DESCRIPTION

Solvent-thinned (MEK and xylene) single-component epoxy resin compound. Primarily used as an adhesive. Cured coating 0.002–0.01 in (0.05–0.25 mm) thick.

Provides excellent chemical, electrical, and mechanical properties when fully cured. Film is hard, with high heat distortion temperature. Excellent in transducer service.



RoHS
COMPLIANT



CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Minimum Cure: 2 hours at +375°F (+190°C)
OPERATING TEMPERATURE RANGE	Short Term: –452° to +400°F (–269° to +205°C) Long Term: –452° to +300°F (–269° to +150°C)
SHELF LIFE	Minimum 9 months at +75°F (+24°C); or 18 months at +40°F (+5°C). Refer to product label for most recent information.

PACKAGING	
KIT	SINGLE BOTTLE
4 brush-cap bottles [1 oz (30 ml) ea] premixed adhesive	1 brush-cap bottle [1 oz (30 ml)] premixed adhesive

Protective Coating

FEATURES

- Excellent mechanical and chemical protection.
- Good leadwire anchor.
- Also used as an adhesive
- Elevated-temperature cure.

DESCRIPTION

Two-component 100%-solids, elevated-temperature-curing epoxy system. Very high viscosity. Generally applied with a spatula, and can be contoured to the surface. Coating thickness 0.005–0.03 in (0.1–0.75 mm).

Commonly used for mechanical protection at elevated temperatures and in highly reactive hot synthetic oils such as in aircraft engines. Very good leadwire anchor to high g-fields (see Tech Note TT-601. Can be used to fill slots or grooves. Can be machined after cure.



CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	6 hours at +250°F (+120°C), or 3 hours at +300°F (+150°C), or 2 hours at +350°F (+175°C), or 1 hour at +400°F (+205°C).
MIXED POT LIFE	10 hours at +75°F (+24°C); increased by refrigeration, indefinite by freezing.
OPERATING TEMPERATURE RANGE	Short Term: –100° to +500°F (–75° to +260°C) Long Term: –100° to +400°F (–75° to +205°C)
SHELF LIFE	Minimum 6 months at +75°F (+24°C); refrigeration recommended. Refer to product label for most recent information.

PACKAGING
KIT
3 mixing jars ea Resin and Hardener (45 g).

Protective Coating

FEATURES

- No cure required
- Quick application
- Excellent mechanical protection
- Resistant to water penetration.

DESCRIPTION

Single-component butyl rubber patch with vinyl carrier. Quick application, even at low temperature. Excellent mechanical protection. Resistant to water penetration.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	None
OPERATING TEMPERATURE RANGE	-20° to +200°F (-30° to +95°C)
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.

PACKAGING
KIT
5 sheets 4 x 6 x 0.1 in (100 x 150 x 2.5 mm)

Protective Coating

FEATURES

- Flexible moisture protection
- Ready to use immediately after application.
No curing required.

DESCRIPTION

Single-component soft paste wax. General-purpose moisture protection.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
OPERATING TEMPERATURE RANGE	-100° to +150°F (-73° to +66°C)
SHELF LIFE	Minimum 1 year. Refer to product label for most recent information.

PACKAGING
KIT
1-lb (454-g) can

Protective Coating

OTHER *M-LINE* COATINGS COMPATIBLE WITH GAGEKOTE #5:

- M-Coat W-1 Wax
- M-Coat B

DESCRIPTION

Two-part 100%-solids modified polysulfide epoxy. Good for general laboratory and field use. Prime leadwire insulation with M-Coat B. Excellent mechanical protection. Resistant to salt water, gasoline, hydrocarbon oils, most acids, alkalines, and solvents.



RoHS
COMPLIANT

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Air dry 6 hours at +75°F (+24°C) or 1 hour at +150°F (+66°C).
OPERATING TEMPERATURE RANGE	-90° to +250°F (-68° to +120°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.

PACKAGING	
KITS	
4 jars Part A (1.5 oz/45 gm) 4 jars Part B (0.5 oz/15gm)	1 jar Part A (11 oz/340 gm) 1 jar Part B (3.5 oz/114 gm)

Protective Coating

OTHER *M-LINE* COATINGS COMPATIBLE WITH GAGEKOTE #8:

- Gagekote #5



RoHS
COMPLIANT



DESCRIPTION

Single component transparent acrylic coating. Recommended as an under or over coating for Gagekote #5. Good for anchoring intra-bridge wiring in high performance transducers. Extremely flexible and resistant to direct water immersion, mild solvents and chemicals. Film thickness of 0.005–0.01 in (0.1–0.25 mm) per coat.

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Single coat air dry for 10 minutes at +75°F (+24°C). Prior to encapsulation by other coatings, air dry 4 hours at +75°F (+24°C) or 30 minutes at +150°F (+65°C) to prevent solvent entrapment.
OPERATING TEMPERATURE RANGE	–100° to +270°F (–75° to +130°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.

PACKAGING	
KITS	SINGLE
12 brush-cap bottles [1 oz (30 ml) each] 1 bottle [8 oz (240 ml)] 1 bottle [32 oz (960 ml)]	1 brush-cap bottle [1 oz (30 ml)]

Protective Coating

OTHER *M-LINE* COATINGS COMPATIBLE WITH GAGEKOTE #11:

- WC-16 Cement
- NCC-3 Cement
- Sauereisen DKS-8 Cement
- GC Cement
- HG-1 Cement
- PBX Cement



RoHS
COMPLIANT

DESCRIPTION

Single-component clear coating. High temperature protective coating, when cured, seals and protects free filament strain gage installations. Must be reapplied after exposure to temperature excursions above +900°F (+482°C).

CHARACTERISTICS	
PARAMETER	DETAILS
CURE REQUIREMENTS	Air dry 2 hours at +75°F (+24°C), followed by 1 hour at +350°F (+175°C).
OPERATING TEMPERATURE RANGE	-452° to +900°F (-269° to +482°C).
SHELF LIFE	Minimum 1 year at +75°F (+24°C). Refer to product label for most recent information.

PACKAGING
KIT
1 brush-cap bottle [1 oz (30 ml)]



CONTENTS

GAK-2-200	86
GAK-2-AE-10	86
GAK-2-610	86
BAK-200	87
CEA-200	87
MAK-1	88

Strain Gage Application Kits

Strain Gage Application Kits

GAK-2 FEATURES

- GAK-2 Series Kits include materials necessary to immediately start making strain gage installations for routine applications.
- Kit supplies and materials are provided in a tool box for convenience and portability. CSM Degreaser, previously supplied in the above kit, is to be ordered separately, as needed.
- All application kits should be stored at or near +75°F (+24°C). Refer to product label for most recent information.

GAK-2-200



GAK-2-AE-10

GAK-2-610



KIT CONTENTS		
GAK-2-200	GAK-2-AE-10	GAK-2-610
M-Bond 200, 1 kit MCA-1, M-Prep Conditioner A, 2 oz (60 ml) bottle MN5A-1, M-Prep Neutralizer 5A, 2 oz (60 ml) bottle SCP-1 220-grit silicon-carbide paper, 1 roll SCP-2 320-grit silicon-carbide paper, 1 roll SCP-3 400-grit silicon-carbide paper, 1 roll CSP-1, cotton swabs, 1 package GSP-1, gauze sponges, 1 package PCT-3MD, gage installation tape, 1 roll PDT-3, paper drafting tape, 1 roll 361A-20R-25, solder, 1 roll, 25 ft (7.6 m) RSK-1, rosin solvent, bottle, 1 oz (30 ml) CPF-AST, bondable terminals, 1 box 326-DFV, 3-conductor leadwire, 100 ft (30 m) M-Coat A protective coating, bottle, 1 oz (30 ml) 134-AWP, solid copper wire, 500 ft (150 m) Plastic tool box	M-Bond AE-10, 1 kit MCA-1, M-Prep Conditioner A, 2 oz (60 ml) bottle MN5A-1, M-Prep Neutralizer 5A, 2 oz (60 ml) bottle SCP-1 220-grit silicon-carbide paper, 1 roll SCP-2 320-grit silicon-carbide paper, 1 roll SCP-3 400-grit silicon-carbide paper, 1 roll CSP-1, cotton swabs, 1 package GSP-1, gauze sponges, 1 package PCT-3MD, gage installation tape, 1 roll PDT-3, paper drafting tape, 1 roll 361A-20R-25, solder, 1 roll, 25 ft (7.6 m) RSK-1, rosin solvent, bottle, 1 oz (30 ml) CPF-AST, bondable terminals, 1 box 326-DFV, 3-conductor leadwire, 100 ft (30 m) M-Coat A protective coating, bottle, 1 oz (30 ml) 134-AWP, solid copper wire, 500 ft (150 m) SGP-2 silicone rubber, 1 piece HSC-1, No. 1 spring clamp, 1 each HSC-2, No. 2 spring clamp, 1 each Plastic tool box	M-Bond 610 adhesive, 1 kit MCA-1, M-Prep Conditioner A, 2 oz (60 ml) bottle MN5A-1, M-Prep Neutralizer 5A, 2 oz (60 ml) bottle SCP-1 220-grit silicon-carbide paper, 1 roll SCP-2 320-grit silicon-carbide paper, 1 roll SCP-3 400-grit silicon-carbide paper, 1 roll CSP-1, cotton swabs, 1 package GSP-1, gauze sponges, 1 package MJG-2, Mylar® tape, 1 roll PDT-3, paper drafting tape, 1 roll 361A-20R-25, solder, 1 roll, 25 ft (7.6 m) RSK-1, rosin solvent, bottle, 1 oz (30 ml) CPF-AST, bondable terminals, 1 box 326-DFV, 3-conductor leadwire, 100 ft (30 m) M-Coat C protective coating, bottle, 1 oz (30 ml) 134-AWP, solid copper wire, 500 ft (150 m) SGP-2 silicone rubber, 1 piece HSC-1, No. 1 spring clamp, 1 each HSC-2, No. 2 spring clamp, 1 each TFE-1, Teflon® film, 1 roll Plastic tool box

Mylar and Teflon are Registered Trademarks of DuPont.

Strain Gage Application Kits

BAK-200 AND CEA-200 FEATURES

- BAK-200 kit contains essential materials for M-Bond 200 installations, packaged in a cardboard box.
- CSM Degreaser, previously supplied in the above kit, is to be ordered separately, as needed.
- CEA-200 kit contains CEA strain gages and materials needed for installation of the gages. Perfect for educators and novice strain gage users.
- All application kits should be stored at or near +75°F (+24°C). Refer to product label for most recent information.




KIT CONTENTS		
BAK-200	CEA-200 (not pictured)	
M-Bond 200 adhesive, bottle, 1 oz (30 ml) M-Bond 200 catalyst, bottle, 1 oz (30 ml) CSP-1, cotton swabs, 1 package GSP-1, gauze sponges, 1 package PCT-3MD, gage installation tape, 1 roll MCA-1, M-Prep Conditioner A, 2 oz (60 ml) bottle MN5A-1, M-Prep Neutralizer 5A, 2 oz (60 ml) bottle SCP-2 320-grit silicon-carbide paper, 60 in (152 cm) SCP-3 400-grit silicon-carbide paper, 60 in (152 cm)	CEA-13-250UW-350/P2, 5 pieces M-Bond 200 adhesive, bottle, 2 at 2 gm M-Bond 200 catalyst, bottle, 0.5 oz (15 ml) CSP-1, cotton swabs, 1 package GSP-1, gauze sponges, 1 package PCT-3MD, gage installation tape, 1 roll GC-6, alcohol, bottle, 4 oz	MCA-1, M-Prep Conditioner A, 2 oz (60 ml) bottle MN5A-1, M-Prep Neutralizer 5A, 2 oz (60 ml) bottle SCP-2 320-grit silicon-carbide paper, 60 in (152 cm) SCP-3 400-grit silicon-carbide paper, 60 in (152 cm) Aluminum beams, 2 each Practice beams, 2 each DP-1, drafting pencil, 1 each Practice patterns, 25 pieces

Master Strain Gage Application Kit

FEATURES

- Includes supplies and special tools for making a wide range of strain gage installations for both laboratory and field applications.
- Successfully complete any organic strain gage installation for operation from -452° to +500°F (-269° to +260°C).
- All materials, including complete instructions, conveniently packaged in a molded, crush-proof, copolymer toolbox. CSM Degreaser, previously supplied in this kit, is to be ordered separately, as needed.
- All application kits should be stored at or near +75°F (+24°C). Refer to product label for most recent information.

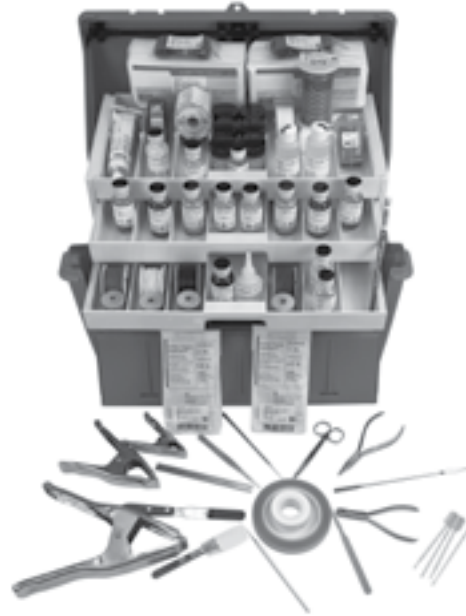

KIT CONTENTS

Surface Preparation Materials:

MCA-1, M-Prep Conditioner A, 1 bottle
 MN5A-1, M-Prep Neutralizer 5A, 1 bottle
 Silicon-Carbide Paper: 220, 320, 400 grit,
 one 10-ft (3-m) roll each
 CSP-1, Cotton Swab, 4 packages
 GSP-1, Gauze Sponges, 2 packages
 RSK-1, Rosin Solvent, two 1-oz (30-ml) bottles

Application Tools:

SSH-1, Surgical Shears
 SSC-1, Surgical Scalpel and Blade
 SSC-2, Scalpel Blades (5)
 BTW-1, Tweezers
 STW-1, Tweezers
 DP-1, 4-H Drafting Pencil
 DWC-1, Diagonal Cutters
 DPR-1, Dental Probe (2)
 NNP-1, Needle-Nosed Pliers
 SSS-1, Steel Scale
 SPT-1, Spatula
 SPT-2, Spatula

Hardware:

PCT-3MD Gage Installation Tape
 PDT-3, Drafting Tape, 2 dispenser rolls
 MJG-2, Mylar® Tape, 1 roll
 HSC-1, No. 1 Spring Clamps (4)
 HSC-2, No. 2 Spring Clamps (2)
 HSC-3, No. 3 Spring Clamp (1)
 TFE-1, Teflon® Film, 1 roll
 GT-14, Pressure Pads and Plates Kit

Adhesives:

M-Bond 200, 1 kit
 M-Bond AE-10, 1 kit
 M-Bond 610, 1 kit

Soldering Supplies:

361A-20R, 1 lb (0.45 kg)
 361A-20R-25, 1 roll
 450-20S-25, 1 roll
 570-28R-20, 1 roll
 FAR-2 M-Flux AR, 1 kit
 CPF-AST, Terminal Strip Assortment, 1 box

Leadwire:

134-AWP, 100 ft (30 m)
 126-DWV: Red, White, Black, Green, one 100-ft (30-m) roll each
 326-DFV, 100 ft (30 m)
 130-FWT: Red, White, Black, Green, one 50-ft (15-m) roll each

Protective Coatings:

M-Coat A, two 1-oz (30-ml) bottles
 M-Coat B, two 1-oz (30-ml) bottles
 M-Coat C, 1-oz (30-ml) bottle
 M-Coat D, 1-oz (30-ml) bottle
 M-Coat F, 1 kit
 3145 RTV Silicone Rubber, 3-oz (85-g) tub

Mylar and Teflon are Registered Trademarks of DuPont.

Reference: An adhesive selection table is provided in the “M-Bond Strain Gage Adhesives.”

Precision Resistors

Epoxy Cased
Wirewound
Hermetically Sealed

CONTENTS

Specifications 90

Shunt Calibration

W-599880-02	91
W-119880-02	91
S-59880-01	91
S-29880-01	91
S-19880-01	91
S-14880-01	91
S-11880-01	91
S-5880-01	91
W-349650-02	91
W-174650-02	91
S-87150-01	91
S-57983-01	91
S-43400-01	91
S-34650-01	91
S-17150-01	91
W-999000-02	91
W-499000-02	91
W-249000-02	91
W-165666-02	91
W-124000-02	91


Bridge Completion

S-50-01	91
S-60-01	91
S-100-01	91
S-120-01	91
S-175-01	91
S-240-01	91
S-350-01	91
S-500-01	91
S-1000-01	91
S-2000-01	91
S-5000-01	91
H-100-01	91
H-120-01	91
H-350-01	91
H-1000-01	91

Specifications and Selection Charts

Fixed resistors have two primary uses in strain gage circuits: shunt calibration of strain-measuring instrumentation, and bridge completion. For shunt calibration, a fixed resistor is temporarily shunted across a bridge arm to produce a known resistance change in the bridge circuit. The resulting instrument indication is then compared to the calculated strain corresponding to the resistance change. For bridge-completion applications, a fixed resistor may be used in the adjacent arm of the bridge to complete the external half-bridge circuit when a single strain gage is connected in a quarter-bridge arrangement.

In each of these applications, the accuracy of the strain measurement is affected, directly or indirectly, by the accuracy and stability of the fixed resistor(s) used in the circuit. It is important, therefore, that only precision, high-stability resistors be selected for these purposes.

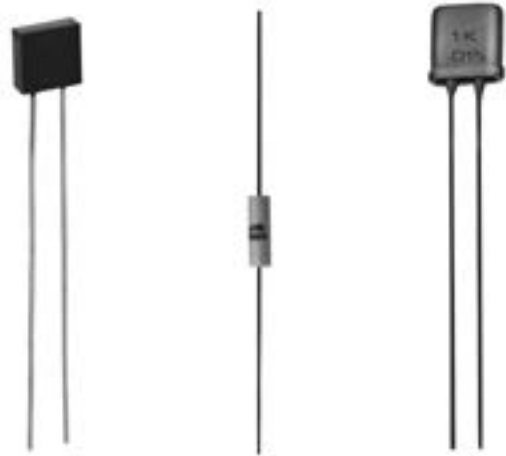

Standard S-Type

Wire Wound

Hermetic

PRECISION RESISTOR SPECIFICATIONS		
STANDARD S-TYPE (PREFIX "S")	WIRE WOUND (PREFIX "W")	HERMETIC (PREFIX "H")
<p>Noted for long-term stability and low temperature-coefficient-of-resistance. Used for shunt calibration (below 100,000 Ω) and bridge completion.</p> <p>Size: 0.295 x 0.320 x 0.10 in (7.5 x 8.1 x 2.5 mm).</p> <p>Temperature Coefficient: ±0.6 ppm/°F; +32° to +140°F (±1 ppm/°C; 0° to +60°C).</p> <p>Stability: 25 ppm/year max. drift.</p> <p>Wattage: 0.3 at +75°F (+24°C).</p> <p>Leadwires: 22 AWG tinned copper.</p> <p>Construction: Encapsulated in epoxy case for use in normal laboratory environment.</p>	<p>For high-value shunt resistance requirements (above 100,000 Ω).</p> <p>Size: 0.25 in dia. x 0.75 in long (6.4 x 19.1 mm).</p> <p>Temperature Coefficient: ±12 ppm/°F; +32° to +140°F (±20 ppm/°C; 0° to +60°C).</p> <p>Stability: 30 ppm/year max. drift.</p> <p>Wattage: 0.3 at +75°F (+24°C).</p> <p>Leadwires: 20 AWG tinned copper.</p> <p>Construction: Noninductive windings. Encapsulated for use in normal laboratory environment.</p>	<p>Best long-term stability under adverse environmental conditions. Premium resistors used for bridge completion where highest accuracy and stability are required.</p> <p>Size: 0.4 in square x 0.15 in thick (10 x 4 mm).</p> <p>Temperature Coefficient: ±0.6 ppm/°F; +32° to +140°F (±1 ppm/°C; 0° to +60°C).</p> <p>Stability: 5 ppm/year max. drift.</p> <p>Wattage: 0.25 at +75°F (+24°C).</p> <p>Leadwires: 22 AWG tinned copper.</p> <p>Construction: Hermetically sealed in metal case. Excellent long-term stability.</p>

Specifications and Selection Charts

SHUNT-CALIBRATION RESISTORS				
	ORDER NO.	RESISTANCE IN OHMS	TOLERANCE IN %	EQUIVALENT MICROSTRAIN
FOR 120 Ω GAGE CIRCUIT	W-599880-02	599,880	±0.02	100
	W-119880-02	119,880	±0.02	500
	S-59880-01	59,880	±0.01	1,000
	S-29880-01	29,880	±0.01	2,000
	S-19880-01	19,880	±0.01	3,000
	S-14880-01	14,880	±0.01	4,000
	S-11880-01	11,880	±0.01	5,000
	S-5880-01	5,880	±0.01	10,000
FOR 350 Ω GAGE CIRCUIT	W-349650-02	349,650	±0.02	500
	W-174650-02	174,650	±0.02	1,000
	S-87150-01	87,150	±0.01	2,000
	S-57983-01	57,983	±0.01	3,000
	S-43400-01	43,400	±0.01	4,000
	S-34650-01	34,650	±0.01	5,000
	S-17150-01	17,150	±0.01	10,000
	FOR 1000 Ω GAGE CIRCUIT	W-999000-02	999,000	±0.02
W-499000-02		499,000	±0.02	1,000
W-249000-02		249,000	±0.01	2,000
W-165666-02		165,666	±0.01	3,000
W-124000-02		124,000	±0.01	4,000
S-99000-01		99,000	±0.01	5,000
S-49000-01		49,000	±0.01	10,000

The "Equivalent Microstrain" column shows the true compression strain simulated by shunting each calibration resistor across an active strain gage arm of the exact indicated resistance, based on a circuit gage factor setting of 2.000.

BRIDGE COMPLETION RESISTORS	
CIRCUIT AND BRIDGE COMPLETION TOLERANCE ±0.01%	
ORDER NO.	RESISTANCE IN OHMS
S-50-01	50
S-60-01	60
S-100-01	100
S-120-01	120
S-175-01	175
S-240-01	240
S-350-01	350
S-500-01	500
S-1000-01	1,000
S-2000-01	2,000
S-5000-01	5,000
H-100-01	100
H-120-01	120
H-350-01	350
H-1000-01	1,000

Note:

Shunt-calibration resistors are chosen to accurately simulate resistance change in a strain gage subjected to specified levels of compressive strain. Strain indicators generally produce a linear output with a fully active half-bridge or full-bridge input circuit, and will be slightly in error when a single active arm is used. The same nonlinearity occurs whether the gage is actually strained in compression or simulated by shunting the gage with the corresponding calibration resistor. See Tech Note TN-514, "Shunt Calibration of Strain Gage Instrumentation."

MR1-350-127.....	94
MR1-10C-129	94
MR1-350-130.....	94
MR2-350-128.....	94


Bridge Completion Modules

Information and Selection Chart

Strain gage instrumentation is readily available with built-in bridge completion resistors and “dummy” gages to accept quarter- and half-bridge strain gage input circuits. However, if the instrumentation at hand is not provided with these components, or if the measurement application does not permit their use, external bridge completion must be provided, and MR-Series Bridge Completion Modules can be an excellent choice in these applications.

MRF-Series Bridge Completion Modules employ Bulk Metal Foil Resistors. The resistors are specially processed to “match” the thermal expansion coefficient of the ceramic, resulting in a very low resistance temperature coefficient equivalent to $\pm 0.15 \mu\epsilon/^\circ\text{F}$ ($\pm 0.27 \mu\epsilon/^\circ\text{C}$) for the half-bridge circuits, and $\pm 0.35 \mu\epsilon/^\circ\text{F}$ ($\pm 0.63 \mu\epsilon/^\circ\text{C}$) for the dummy gages, over a temperature range from 0° to $+200^\circ\text{F}$ (-18° to $+95^\circ\text{C}$). Maximum operating temperature range is -50° to $+250^\circ\text{F}$ (-45° to $+120^\circ\text{C}$).

Each module is covered with a special environmental protection system to ensure long-term stability. Each module is provided with foam tape for easy attachment to the test-part surface or at the instrumentation site, and gold plated copper terminals facilitate attachment of up to 22-gauge (0.64 mm dia.) leadwires.

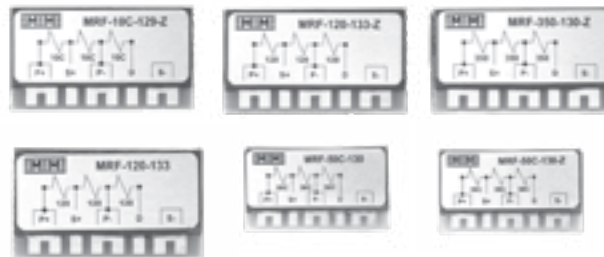

Completing the bridge circuit at the strain gage site provides for a symmetrical, balanced leadwire system between the strain gage circuit and the instrumentation. This can reduce effects of noise pickup in the leadwire system in some environments. Where switch contacts, slip rings, or other mechanical connections are employed between the strain gages and measuring instrumentation, or when leadwires will be periodically disconnected from the measuring instrument, accuracy can be improved by completing the bridge at the measurement site. Bridge completion modules can be designed to meet special circuit requirements. Contact our Applications Engineering Department for a detailed discussion of your special needs.

CHARACTERISTICS		
MODULE TYPE AND FEATURES	BRIDGE EXCITATION (VOLTS)	
	RECOMMENDED	MAXIMUM
MRF-350-127: Provides a precision 350 Ω half bridge as well as 120 Ω and 350 Ω dummy gages. Recommended for use with half-bridge strain gage circuits of any resistance value, or with 120 Ω or 350 Ω three-wire quarter-bridge circuits. Size (including foam tape): 1.3 x 1.2 x 0.3 in (32.5 x 29.5 x 7.8 mm). Weight: 6g.	0.5–15 V 0.5–25 V	20 V (D120) 35 V (D350)
MRF-350-127-Z: RoHS compliant MRF-350-127	0.5–15 V 0.5–25 V	20 V (D120) 35 V (D350)
MRF-10C-129: Provides a precision 1000 Ω half bridge and a 1000 Ω dummy gage. Recommended for use with half-bridge strain gage circuits of any resistance value, or with 1000 Ω quarter-bridge circuits. High resistance extends battery life in battery-powered instrumentation, reduces strain gage self-heating, and permits higher bridge excitation voltage to improve signal-to-noise ratio. Size (including foam tape): 1.3 x 0.7 x 0.2 in (32 x 18.2 x 5.7 mm). Weight: 6g.	0.5–30 V	40 V
MRF-10C-129-Z: RoHS compliant MRF-350-127	0.5–30 V	40 V
MRF-350-130: Provides a precision 350 Ω half bridge and a 350 Ω dummy gage. Recommended for use with half-bridge strain gage circuits of any resistance value, or with 350 Ω three-wire quarter-bridge circuits. Size (including foam tape): 1.3 x 0.7 x 0.2 in (32 x 18 x 5.7 mm). Weight: 6g.	0.5–18 V	25 V
MRF-350-130-Z: RoHS compliant MRF-350-130	0.5–18 V	25 V
MRF-350-128: Provides a precision 350 Ω half bridge in a compact size for use with half-bridge strain gage circuits. Small size makes it ideal for attachment at the strain gage site on the test part in many applications. Size (including foam tape): 0.9 x 0.9 x 0.2 in (21.7 x 23.8 x 5.7 mm). Weight: 6g.	0.4–18 V	25 V

Half-bridge circuits in each module type are balanced to within $\pm 0.005\%$. Resistance tolerance on each dummy gage is $\pm 0.02\%$.

Information and Selection Chart

CHARACTERISTICS		
MODULE TYPE AND FEATURES	BRIDGE EXCITATION (VOLTS)	
	RECOMMENDED	MAXIMUM
MRF-350-128-Z: RoHS compliant MRF-350-128	0.4–18 V	25 V
MRF-120-133: Provides a precision 120 Ω half bridge and a 120 Ω dummy gage. Recommended for use with half-bridge strain gage circuits of any resistance value, or with 120 Ω three-wire quarter-bridge circuits. Size (including foam tape): 1.3 x 0.7 x 0.2 in (32 x 18.2 x 5.7 mm). Weight: 6g.	0.5–15 V	20 V
MRF-120-133-Z: RoHS compliant MRF-120-133:	0.5–15 V	20 V
MRF-50C-130-Z: Provides a precision 5000 Ω half bridge and a 5000 Ω dummy gage. Recommended for use with half-bridge strain gage circuits of any resistance value, or with 5000 Ω quarter-bridge circuits. High resistance extends battery life in battery-powered instrumentation, reduces strain gage self-heating, and permits higher bridge excitation voltage to improve signal-to-noise ratio. Size (including foam tape): 1.3 x 0.7 x 0.2 in (32 x 18 x 5.7 mm). Weight: 6g.	0.5–30 V	40 V
MRF-50C-130-Z: RoHS compliant MRF-50C-130:	0.5–30 V	40 V

Half-bridge circuits in each module type are balanced to within ±0.005%. Resistance tolerance on each dummy gage is ±0.02%.



CONTENTS

Model 1300	98
Model 700B	100

Special-Purpose Equipment

Gage Installation Tester

FEATURES

- A compact, battery-powered instrument used to verify the electrical quality of a strain gage installation BEFORE it is placed in service as well as for fault finding AFTER an installation is put into service.
- Reads with the push of a button — no warm-up
- Reads insulation resistance (leakage) to 20,000 MΩ with 15 VDC
- Measures deviation of installed gage resistance from precise standards to a resolution of 0.02%
- Ohmmeter scale for troubleshooting questionable installations
- Verifies the complete gage circuit, including leadwires



DESCRIPTION

Two of the most important measurements used to verify the quality of a strain gage installation are insulation resistance (leakage to ground) and shift in gage resistance due to installation procedures. While these two measurements are not a complete guarantee of eventual proper strain gage performance, any installation that produces questionable values should not be relied upon where accuracy of results is necessary.

For example, a voltage difference between the specimen and strain gage frequently exists. A low insulation resistance will permit this voltage differential to introduce extraneous signals during strain measurement.

Several sources of variations in insulation resistance and shifts in gage resistance are:

- Insulation resistance in excess of 20,000 MΩ should be expected for foil strain gages when installed under laboratory conditions. A value of 10,000 MΩ should be considered minimum. A reading below this value generally indicates trapped foreign matter, moisture,

residual flux or backing damage due to soldering, as well as incomplete solvent evaporation from an overcoating.

- Deterioration of the insulation resistance with time may be an indication of an improperly coated installation.
- At higher test temperatures, particularly above +300°F (+150°C), it is normal to expect lesser values. Ten MΩ is considered to be the lower allowable value.
- Shifts in gage resistance during installation should not normally exceed 0.5% when using room-temperature-curing adhesives. Resistance shifts greater than 0.5% generally indicate damage to the gage due to improper handling or clamping. However, strain gages installed using elevated-temperature-curing adhesives may exhibit greater shifts in resistance due to adhesive lock-up at elevated temperatures (difference in linear coefficient of thermal expansion between the strain gage and specimen). These shifts will vary depending upon the specific cure temperature and materials used. The shifts should never exceed 2% and should be uniform within 0.5%.

SPECIFICATIONS

All specifications are nominal or typical @ +23°C unless noted.

PARAMETER	SPECIFICATIONS
INPUT CIRCUITS	
Gages:	Three-wire quarter bridge (120 Ω and 350 Ω) and half bridge. Other value quarter bridges using customer's reference, at readily accessible panel terminals.
As ohmmeter:	Two ranges (500 Ω and 500 MΩ mid-scale)
INPUT LEADS	4-ft (1.2m) 4-conductor AWG #26 (0.4-mm diameter) twisted Teflon®-insulated cable supplied (with ground clip and three tinned leads)
METER	3.5-in size [3.00-in (76-mm) scale length] with mirror
Tracking accuracy:	±1% of full range

Gage Installation Tester

PARAMETER	SPECIFICATIONS
MODE SWITCH	Five momentary push buttons: <ul style="list-style-type: none"> • Battery check, • $\pm 5\%$ deviation, • $\pm 1\%$ deviation, • gage resistance (Ω), and • insulation resistance ($M\Omega$)
DEVIATION MODE	Two ranges, $\pm 1\%$ and $\pm 5\%$, of F.S. (50 graduations either side of zero)
Accuracy:	1% range: 0.04% ΔR (2 meter graduations) 5% range: 0.2% ΔR (2 meter graduations)
Excitation:	1.0 VDC per gage
INSULATION RESISTANCE MODE	Graduated 5 $M\Omega$ to 20,000 $M\Omega$ (500 $M\Omega$ mid-scale)
Accuracy:	1 scale division
Test Voltage:	15 VDC open circuit
OHM MODE	Graduated 5 Ω to 20 k Ω (500 Ω mid-scale)
Accuracy:	1 scale division
Test Voltage:	2 VDC open circuit (0.4 VDC @ 120 Ω)
ENVIRONMENTAL	
Temperature:	+15°F to +125°F (-10°C to +50°C)
Humidity:	Up to 80%, non-condensing
POWER SUPPLY	Four 9 V PP3 (ANSI/NEDA 1604A, IEC 6LR61) batteries
Life:	Typically fully test 1000–5000 installations
Case	
Material:	Aluminum case (separable lid)
Size:	5 H x 7 W x 5 D in with lid (125 x 180 x 126 mm)
Weight	3.6 lb (1.6 kg) with batteries

Teflon is a Registered Trademark of DuPont



Portable Strain Gage Welding Unit

FEATURES

- Lightweight and compact size.
- Weld energy is continuously adjustable from 10 to 60 joules, making the Model 700B an excellent choice for installing weldable strain gages and temperature sensors, as well as small thermocouples and light-gage metal.
- Fast welding rate – up to 60 welds per minute
- Replaceable rechargeable battery allows smooth continuous operation.
- “Low-battery” indication to warn the user when the Li-ion battery requires charging.
- Optional carrying bag with shoulder strap and belt loops providing convenient storage space for cables, batteries, battery charger welding tips and instruction manual
- Optional ruggedized work case for safe storage of kit

DESCRIPTION

The Model 700B is an update to our Model 700 welding and soldering unit which has been used for decades for installing many thousands of strain gages worldwide. It offers a modern, compact design with a removable Lithium-ion battery and has a rugged exterior for use in adverse field conditions.

This lighter unit (less than a third of the previous design) and compact dimensions simplifies installations in difficult-to-reach environments. An optional ballistic nylon bag with straps and a carabiner is available with additional space for storing accessories.

Weld energy can be changed from 10 to 60 joules in 1 joule increments, indicated on a digital display. It is capable of producing 60 welds/minute for fast installation. Approximately 1500 welds can be performed on a single



charge, equivalent to around 30 Micro-Measurements linear weldable gages. A removable battery pack and a 40-minute fast charger enables continuous working.

Successful and consistent welds require a proper earth connection; both mechanical clamp and magnetic mount earth leads are available. For additional safety and improved performance a resistance-to-ground check is performed for every weld.

The Micro-Measurements Model 700 Welder is ideal for installing Micro-Measurements CEA, LWK, LEA, LZN and LZE weldable strain gages. Proper installation techniques for weldable gages are detailed in our Instruction Bulletin B-131.

SPECIFICATIONS

All specifications are nominal or typical at +73°F (+23°C) unless noted.

PARAMETER	SPECIFICATION
GENERAL	
Power for recharging	115 VAC or 230 VAC, 50-60 Hz. (different chargers)
Temperature range Operating and storage Battery storage	-4°F to +140°F (-20°C to +60°C) +40°F to +105°F (+4°C to +40°C) (recommended)
Size Main unit Handle Battery Cables (2)	8.25 x 7.5 x 3 in (210 x 191 x 76.2 mm) 6.25 x 1.85 x 3.3 in (159 x 47 x 84 mm) 1.9 x 1.2 x 3.4 in (48 x 30 x 86 mm) 60 x 0.31 in (1524 x 7.9 mm)
Weight	6.9 lb (3.14 kg)
Main unit material	Rugged powder-coated extruded aluminium, splash proof
WELDING SPECIFICATIONS	
Weld Energy Range	10 to 60 joules, in 1-joule steps, adjustable by front-panel control.
Maximum Weld Repetition Rate	60 per minute at 30 joules, typical

Portable Strain Gage Welding Unit

PARAMETER	SPECIFICATION
Number Of Welds Per Battery Charge	Approximately 1500 at weld energy setting of 30 joules. This is equivalent to approx. 30 Micro-Measurements linear weldable gage installations
Battery charge time (from full discharge):	40 minutes typical
Battery	Replaceable rechargeable Li-ion battery, 3.0 Ah, 7.6 – 12.6 Vdc (10.8Vdc nominal)
Welding Probe	Manually fired with trigger control and “steady-rest”
Welding Cables	Two 5 ft (1.5 m), fully flexible
Ground cable	Magnetic mount & mechanical clamp options, 5 ft (1.5 m), 6AWG
Weld Energy Monitor	Calibrated front-panel control with READY indicator; audible indication selectable
SAFETY	
Auto detect ground	<1 Ohm resistance test on return ground path
Self-test on power-up	
COMPLIANCE	
FCC Part 15 Class B, CE	
ACCESSORIES	
<ul style="list-style-type: none"> • Replaceable rechargeable battery • Battery charger • Straight welding tip • Bent welding tip • Extension rod • Rugged carrying bag • Ruggedized work case 	<p>Milwaukee® M12™ REDLITHIUM™ Li-ion 3.0 Ah battery Milwaukee® M12™ REDLITHIUM™ Li-ion battery charger (110VAC or 220VAC)</p> <p>Ballistic nylon bag with shoulder strap, belt loops, carabiner attachment, large pocket for cables and trigger with inner sleeve for spare parts</p>

™ Trademark is registered to Milwaukee Electric Tool Corporation.

ORDERING INFORMATION:

MODEL NUMBER	DESCRIPTION	ITEM DETAILED CONTENT
700B	Welding Unit w/o Battery & Charger	700B – Welding Unit. This kit includes: - 700B Welder - Welding handle and cable assembly - Magnetic and mechanical ground cable assemblies Battery and charger not included.
700B-110	Welding Unit w/ Battery & 110V Charger	700B – Welding Unit with Battery and 110V Charger. This kit includes: - 700B Welder - M12 Battery 3AH - M12 Battery Charger 110VAC - Welding handle and cable assembly - Magnetic and mechanical ground cable assemblies
700B-220	Welding Unit w/ Battery & 220V Charger	700B Welding Unit with Battery and 220V Charger. This kit includes: - 700B Welder - M12 Battery 3AH - M12 Battery Charger 220VAC - Welding handle and cable assembly - Magnetic and mechanical ground cable assemblies

Portable Strain Gage Welding Unit

ORDERING INFORMATION:

MODEL NUMBER	DESCRIPTION	ITEM DETAILED CONTENT
700B-HNDL	Welding Handle Assembly (Spare or replacement unit)	Spare or replacement welding trigger handle and cable assembly. Includes: <ul style="list-style-type: none"> - One straight welding tip - Power cable, 5 ft (1.5 m) 6 AWG red cable - Trigger cable, 5 ft (1.5 m) 18/3 AWG yellow flexible cable
700B-GND	Ground Clamp Assemblies (Spare or replacement units)	Spare or replacement grounding cable assemblies. Includes: <ul style="list-style-type: none"> - Magnetic black grounding clamp assembly (5 ft (1.5 m) 6 AWG) - Mechanical black grounding clamp assembly (5 ft (1.5 m) 6 AWG)
700B-M12-3	M12 Battery 3.0 AH	Milwaukee M12™ REDLITHIUM™ 3.0 Amp battery
700B-CH-110	M12 Battery Charger 110 VAC	Milwaukee M12™ battery charger. 110VAC input
700B-CH-220	M12 Battery Charger 220 VAC	Milwaukee M12™ battery charger. 220VAC input
700B-WC	Ballistic Nylon Work Bag	The Ballistic Nylon work bag comes with shoulder strap and integral carabiner D-rings. Capable of carrying the 700B, two spare batteries, welding handle with cables, ground clamp assemblies, and spare welding tips. Bag only.
700B-ST-STR	Straight Welding Tip	Single straight welding tip
700B-ST-CUR	Curved Welding tip	Single curved welding tip
700B-ER	Welding Extension Rod	Single welding extension rod
700B-WU	Welding Main Unit (spare or replacement unit)	Welder main body only. No welding handle or ground clamp assemblies. No battery or charger.
700B-WNS	Wing Nuts Spares	Set of two (1/4-20 and 10-32) stainless steel wing nuts.
700B-TC	Ruggedized Work Case	Rugged watertight transit case with custom anti-static foam cut out for 700B. Conforms to FedEx/UPS and IATA guidelines for shipping Lithium-Ion batteries. Capable of holding the 700B, three M12-30 batteries, Ballistic Nylon Work Case, M12 Charger, spare welding tip kit. Interior dimensions: 20 x 14 x 7.7 Inches (51 x 36 x 20 mm).



CONTENTS

Technical Publications.....	104
Applications Engineering.....	104
Technical Training	104

Technical Support

Technical Support

In the previous sections of this catalog, we have described the necessary tools, materials, and supplies required for successful strain gage installation. Once the proper selection of application accessories is made, the next and most important step in installing the gage is the application technique itself. To this end, Micro-Measurements offers a full range of technical support that includes an extensive set of instructional

publications, regularly scheduled training programs on the procedures and techniques for making high-quality strain gage installations, and self-teaching aids to help trainees quickly gain skill and proficiency in application techniques. Additionally, we maintain a full-time Applications Engineering staff to assist the customer with any particular strain gage installation problem.

TECHNICAL INFORMATION

Micro-Measurements has published an extensive set of technical notes and detailed instructional literature on practical strain gage application techniques. Most of this technical literature is unique in that the content cannot be found in engineering textbooks or other published sources.

This library of strain gage reference material is continuously updated to reflect the latest technology in application techniques and available in the strain gage technology knowledge base on our website at:

<https://micro-measurements.com/knowledge-base>



APPLICATIONS SUPPORT

Micro-Measurements maintains an experienced and highly trained applications engineering staff. Our Applications Engineers are as close as your telephone, and we urge you to call them for recommendations in strain gage selection to satisfy your particular test requirements.



TRAINING PROGRAMS

Training customers in the proper use of strain measurement techniques is an essential part of the Micro-Measurements philosophy. In support of this principle, Micro-Measurements conducts an extensive series of regularly scheduled technical seminars, workshops, and short courses. Course instructors are recognized authorities in their field. Training sessions are conducted at our facilities in the United States and Europe, as well as at hotels and educational institutions around the world. For schedules, go to:



<https://micro-measurements.com/training>



Contact

mm@vpgsensors.com

micro-measurements.com